

1550B MegOhmMeter Quick Reference Guide

Warning

- Read the 1550B Users Manual before using the tester.
- Lisez le mode d'emploi du 1550B avant d'utiliser le testeur.
- Leggere il manuale d'uso del 1550B prima di usare il tester.
- Vor dem Gebrauch des Testgeräts das 1550B-Bedienungshandbuch lesen.
- Lea el Manual de uso del comprobador 1550B antes de utilizarlo.
- Leia o Manual do Usuário 1550B antes de usar o testador.
- Lees de 1550B gebruiksaanwijzing vóór gebruik van de tester.
- Les bruksanvisningen for 1550B før måleinstrumentet tas i bruk.
- Man bør læse brugsanvisningen til modelserie 1550B, inden instrumentet tages i brug.
- Lue 1550B-käyttöopas ennen tämän testerin käyttöä.
- Läs användarhandboken för 1550B innan du använder testinstrumentet.
- 在使用测试仪之前请阅读 1550B 用户手册。



/ Connections



FUNCTION



UP





SCROLL



DOWN



ENTER

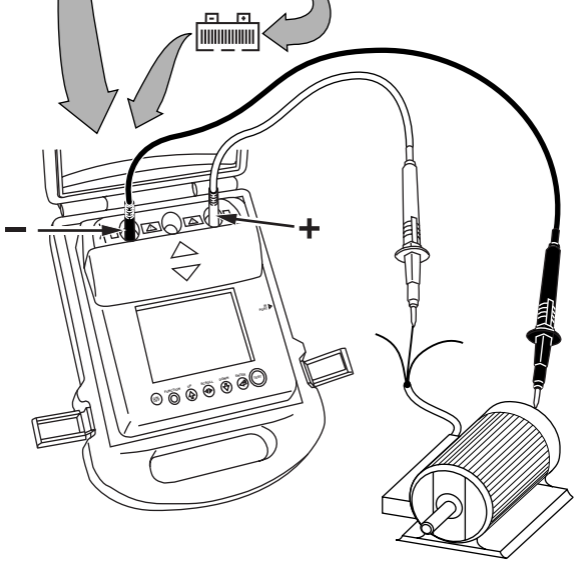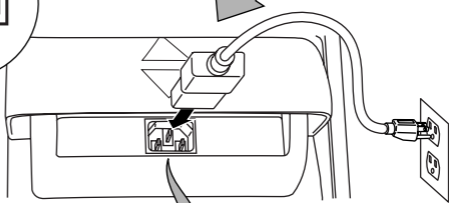

Test Voltage



FUNCTION



SCROLL



ENTER



FUNCTION



TEST VOLTAGE




UP



DOWN



10000V 5000V 2500V
1000V 500V 250V

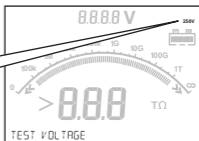

ENTER



TV=XXXX



UP

DOWN



+ 50 V / 100 V

TV=XXXX

- 50 V / 100 V

FUNCTION



TEST VOLTAGE

RAMP TEST

TIME LIMIT

RESULTS

Ramp Test



FUNCTION



SCROLL




ENTER



FUNCTION



RAMP TEST

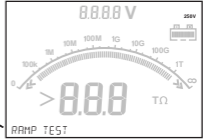

UP



DOWN



FUNCTION






 
TEST VOLTAGE

RAMP TEST

TIME LIMIT

RESULTS

Time Limit

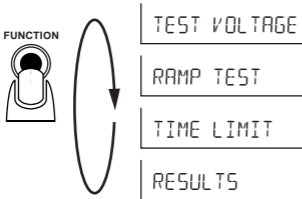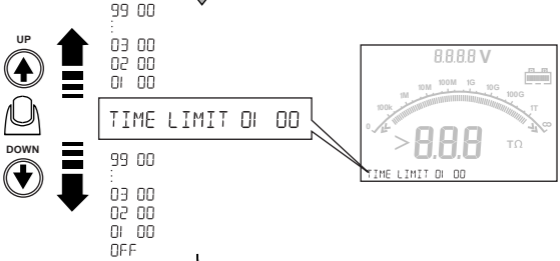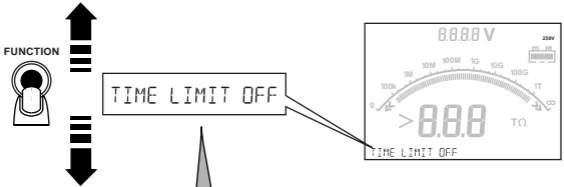

Test



FUNCTION



UP



SCROLL




DOWN



ENTER



1 Sec

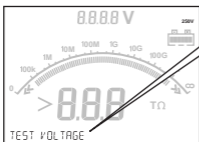

TEST VOLTAGE

TIME LIMITED



USER STOP



BREAK DOWN



ENTER



STORE RESULTS? UP=YES

YES



NO



0-9, A-Z



TAG * 01
|_|_|_|

UP

 


ENTER



TEST VOLTAGE

Results



RESULTS

- TEST VOLTAGE
- RAMP TEST
- TIME LIMIT
- RESULTS

NO RESULTS

RESULTS

FUNCTION

(01, 02, 03 .. 99)
or
(01, 02, pump, .. 99)

TIMER XX XX XXXX
TV=XXXXXV
V=XXXXXV
C=XXXXXUF
PI=XXXXXX
DAR=XXXX
I XXXX
STOPPED
T LIMIT

TIME LIMITED
USER STOP
BREAK DOWN

OFF
00 00

DELTE? UP=YES

REALLY DEL? DOWN=YES

Abort

99 LOCATION FREE

IR

