



187/189 True RMS Multimeter Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


AC/DC Volts

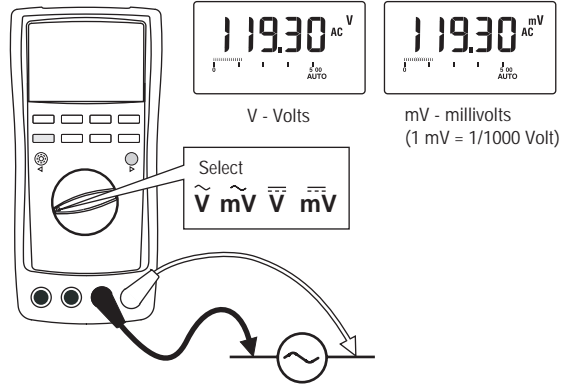


Ohms

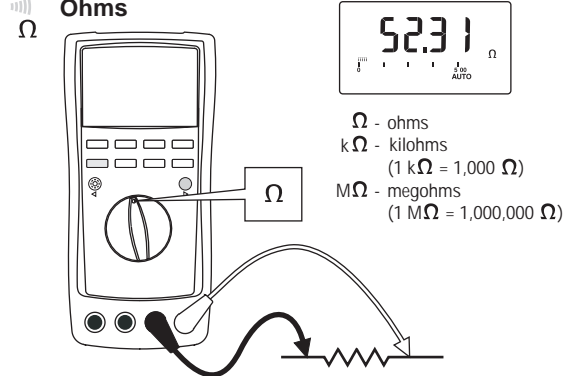


dBm or dBV Decibels

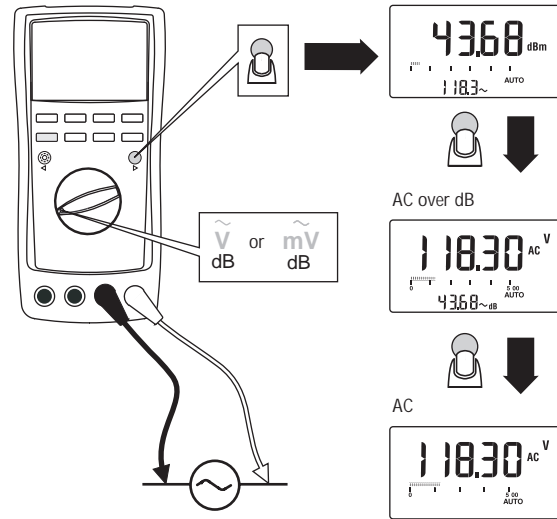


Duty Cycle and Pulse Width

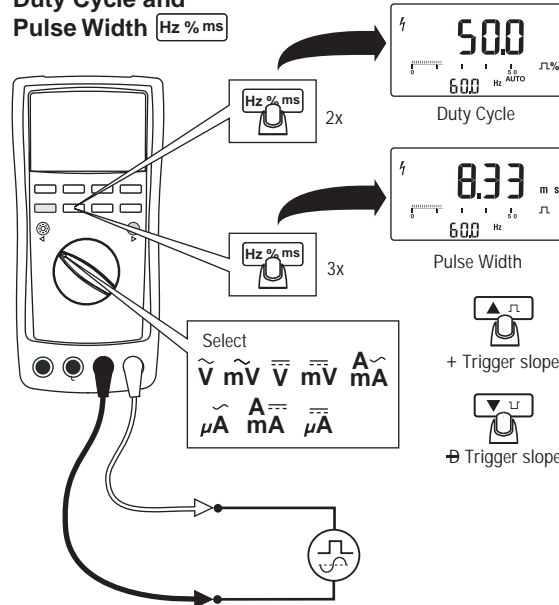


Continuity

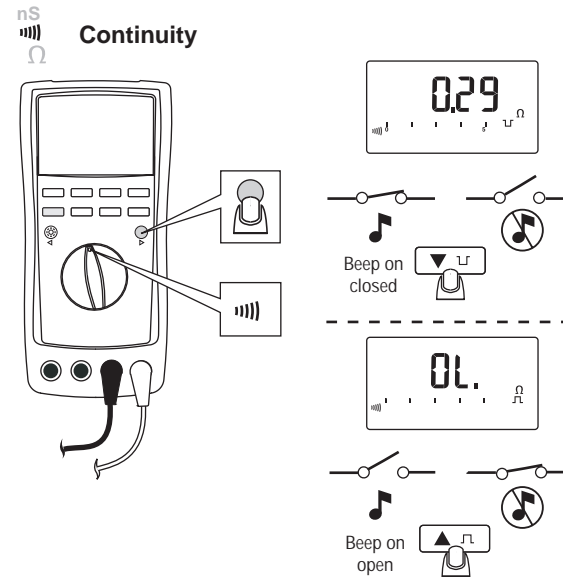


Diode Test

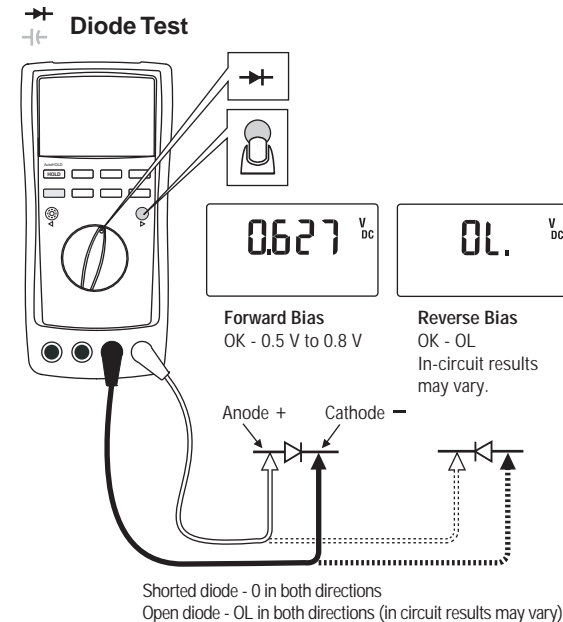


Capacitance

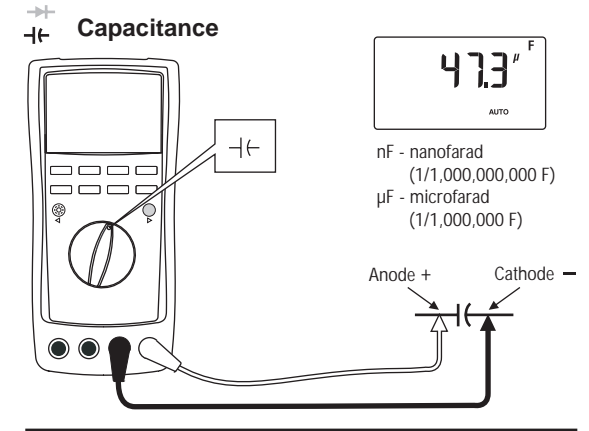


Conductance

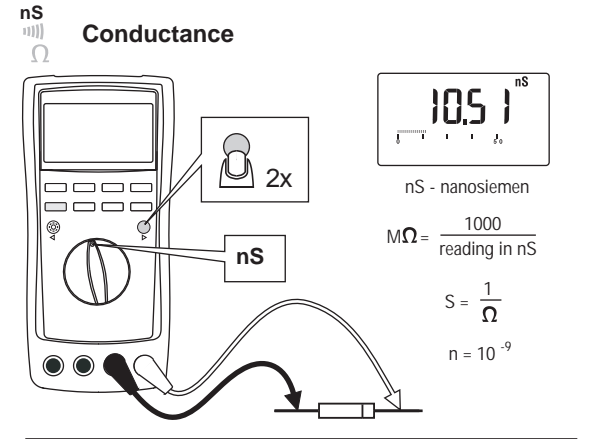

Saving/Logging (Model 89 only)

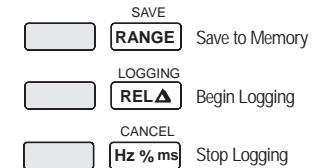

View Memory

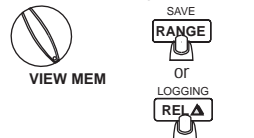


Clear Memory




See Chapter 4 of the Users Manual for complete operating information.


Changing Setup Settings

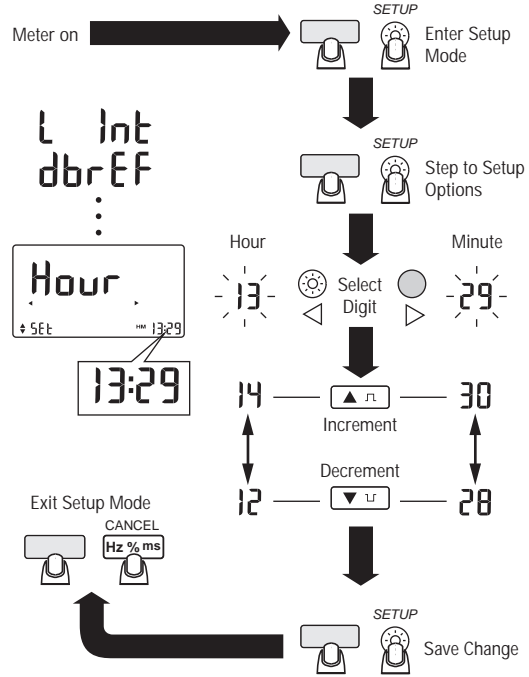


Amps

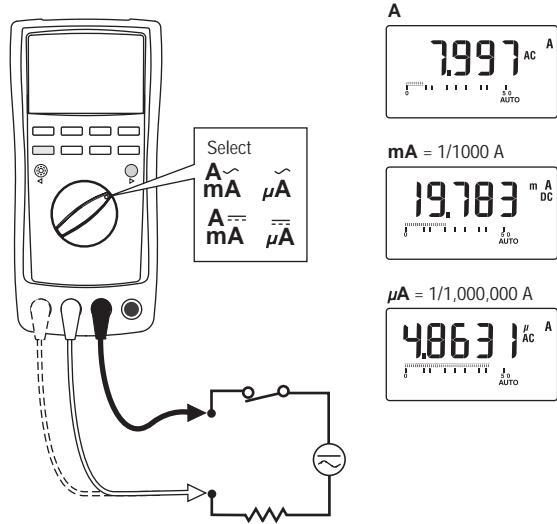


Frequency

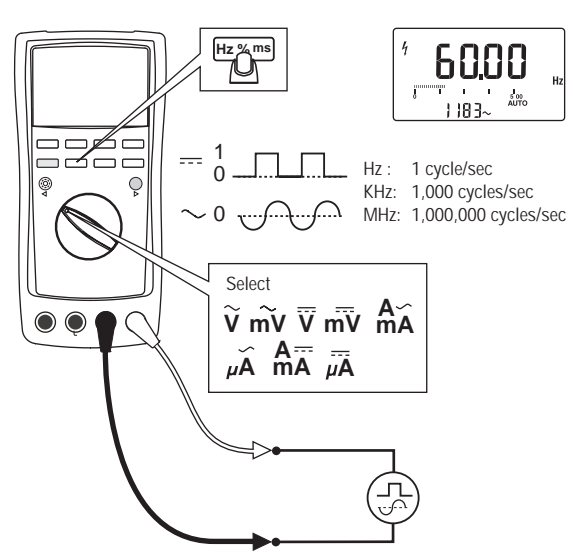


HOLD AutoHOLD

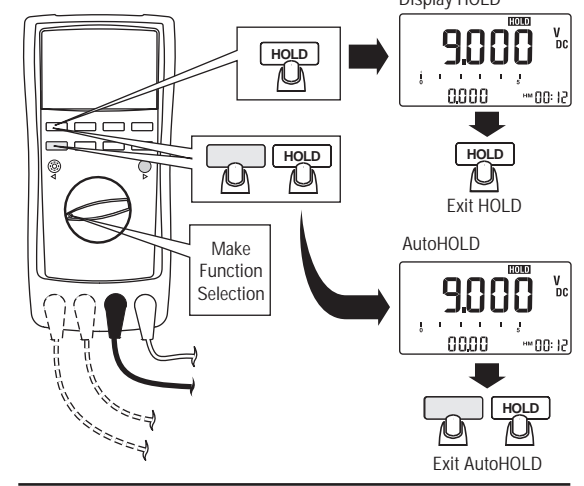


AC + DC

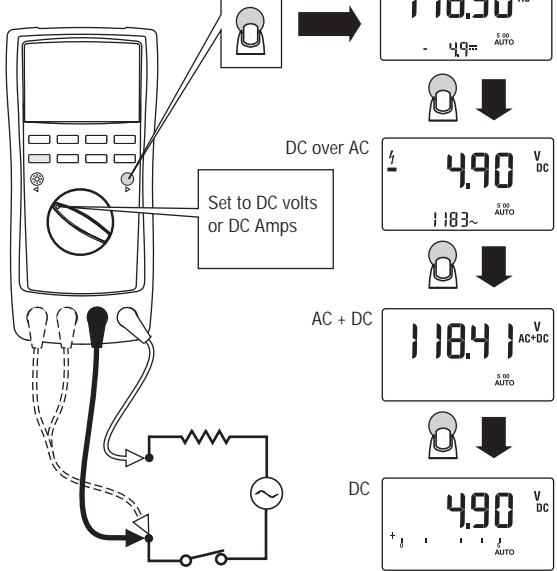

Min, Max, Average

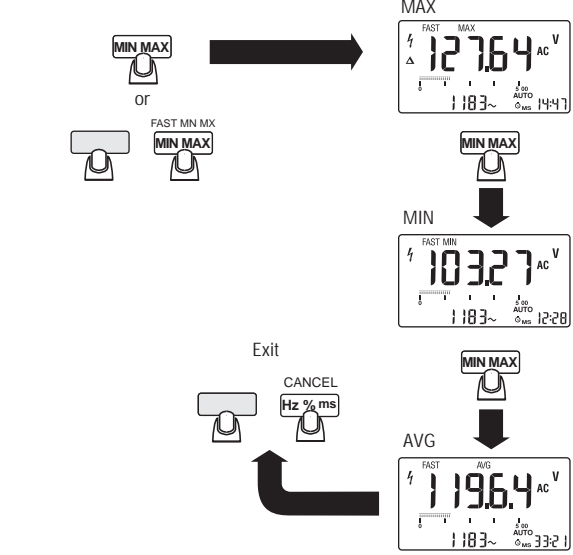

Display Resolution (3-1/2 or 4-1/2 Digits)

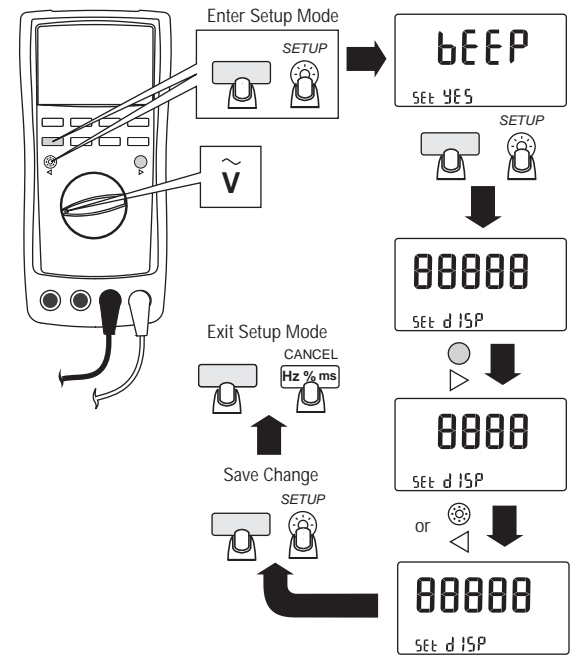

Fuse Test

