

TORKEL 820/840/860

Battery Load Units

User's Manual



User's manual

TORKEL 820/840/860

Battery Load Units

NOTICE OF COPYRIGHT & PROPRIETARY RIGHTS

© 2007, Programma Electric AB. All rights reserved.

The contents of this manual are the property of Programma Electric AB. No part of this work may be reproduced or transmitted in any form or by any means, except as permitted in written license agreement with Programma Electric AB. Programma Electric AB has made every reasonable attempt to ensure the completeness and accuracy of this document. However, the information contained in this manual is subject to change without notice, and does not represent a commitment on the part of Programma Electric AB. Any attached hardware schematics and technical descriptions, or software listings that disclose source code, are for informational purposes only. Reproduction in whole or in part to create working hardware or software for other than Programma Electric AB products is strictly prohibited, except as permitted by written license agreement with Programma Electric AB.

TRADEMARK NOTICES

Programma® is a registered trademark of Programma Electric AB. All other brand and product names mentioned in this document are trademarks or registered trademarks of their respective companies.

Programma Electric AB
Eldarvägen 4
Box 2970
SE-187 29 TÄBY
Sweden

T +46 8 510 195 00
F +46 8 510 195 95
info@programma.se
www.programma.se



Contents

| | | | |
|---|-----------|--|-----------|
| 1 Introduction | 6 | General..... | 18 |
| General..... | 6 | Preparations..... | 18 |
| TOR KEL 820/840/860 | 6 | Testing | 19 |
| TXL830/850/870 (Extra Loads) | 6 | Starting the test..... | 19 |
| TOR KEL Win software (optional)..... | 6 | 8 External current measurement | 20 |
| 2 Safety..... | 8 | General..... | 20 |
| 3 Menu system..... | 10 | Applications | 20 |
| Main menu | 10 | Setting up external current measurement.. | 21 |
| Results | 10 | TOR KEL | 21 |
| Test battery | 10 | DC clamp-on ammeter | 21 |
| Auto-limits | 10 | Connections..... | 22 |
| Memory | 10 | Troubleshooting | 22 |
| Select language..... | 10 | 9 Alarm function | 24 |
| Basic settings..... | 10 | Description | 24 |
| Test method | 10 | Resetting the alarm | 24 |
| 4 Control panel..... | 12 | 10 Auto-limits..... | 26 |
| 1 – Operator control..... | 12 | Invoking the auto-limits function..... | 26 |
| 2 – External current measurement | 12 | Activating auto-limits | 26 |
| 3 – Circuit breaker..... | 13 | 11 TOR KEL connected to a PC..... | 28 |
| 4 – External control | 13 | General..... | 28 |
| 5 – Mains | 13 | TOR KEL Win program | 28 |
| 6 – Connection terminals for the battery .. | 13 | TOR KEL Win features | 28 |
| 5 Conducting a test..... | 14 | Installing TOR KEL Win..... | 29 |
| Test at constant current..... | 14 | Installation | 29 |
| Safety precautions..... | 14 | Setting up communication | 29 |
| Preparations for testing | 14 | Loading the software key | 29 |
| Connecting the current cables to the | | Changing the language used in TOR KEL... | 30 |
| battery | 14 | Testing with TOR KEL Win..... | 30 |
| Setting the current | 15 | Viewing the results..... | 30 |
| Warning and stop limit parameters..... | 15 | 12 Starting and stopping from an external | 32 |
| Starting the test | 15 | device..... | 32 |
| Pausing the test..... | 15 | Start/stop connector | 32 |
| Ending the test..... | 15 | Starting | 32 |
| 6 Testing at constant power / resistance | 16 | Stopping | 32 |
| Constant power..... | 16 | 13 How to obtain the desired current.. | 34 |
| Configuring TOR KEL for constant power .. | 16 | General..... | 34 |
| Constant resistance | 16 | TOR KEL load capacity..... | 34 |
| Configuring TOR KEL for constant | | I _{max} | 34 |
| resistance | 16 | Max power..... | 35 |
| 7 Testing with a load profile | 18 | Final voltage..... | 35 |
| | | Examples of load capacities | 35 |
| | | When a single TOR KEL isn't enough..... | 36 |
| | | TXL Extra Loads connected to TOR KEL | 36 |

| | |
|---|-----------|
| Calculating how many TORKELs and TXLs are needed..... | 36 |
| TORKEL/TXL system examples..... | 37 |
| Test conducted using a system comprising | |
| TORKEL and TXL units | 39 |
| Hookup and settings | 39 |
| 14 TXL Extra Loads | 40 |
| 1 – Selector switch | 40 |
| 2 – Circuit breaker..... | 40 |
| 3 – Connection terminals for the battery . | 40 |
| 4 – Control..... | 40 |
| 5 – Mains..... | 40 |
| Setting up the extra load..... | 41 |
| Testing..... | 41 |
| 15 Optional accessories | 42 |
| Cables..... | 42 |
| Clamp-on DC ammeter | 42 |
| Software | 42 |
| Other | 42 |
| 16 Troubleshooting..... | 44 |
| Messages on display..... | 44 |
| 17 Calibration..... | 46 |
| Calibration procedure | 46 |
| How to calibrate | 46 |
| 1. Calibrating zero levels..... | 46 |
| 2. Calibrating internal current..... | 47 |
| 3. Calibrating internal and external voltage..... | 47 |
| 4. Calibrating of external current..... | 48 |
| Resetting TORKEL | 49 |
| General..... | 49 |
| Performing a reset..... | 49 |
| 18 Specifications | 50 |
| Torkel 820..... | 50 |
| Torkel 840/860..... | 51 |
| TXL 830 /850 /870 | 53 |
| 19 Index..... | 54 |

1

Introduction

General

This manual explains how to use TOR KEL 820, TOR KEL 840 and TOR KEL 860 Battery Load Units, and it also covers the TXL830, TXL850 and TXL870 Extra Loads. Although performance differs from one model to the next, all models are used in the same way. Unless otherwise specified, what is set forth in this manual applies to all models.

TOR KEL 820/840/860

These Battery Load Units are sophisticated instruments designed mainly for capacity tests. All three units can be programmed to test a battery bank at constant current, constant power, or using a user-defined load profile. TOR KEL can also be used for testing battery chargers and other electrical equipment that require resistive load testing.

The three models have different maximum voltage ratings:

| | |
|-------------|----------|
| TOR KEL 820 | 60 V DC |
| TOR KEL 840 | 288 V DC |
| TOR KEL 860 | 480 V DC |

TOR KEL has a number of functions that facilitate its use. Examples include:

- Warning and automatic stop functions for time, discharged capacity and low battery voltage.
- 9 memories where settings can be stored.
- Voltage curve can be stored for later transfer to a PC using the TOR KEL Win program.
- Discharging can be started/stopped from external equipment.
- Testing can be carried out without disconnecting the regular load.

TXL830/850/870 (Extra Loads)

The TXL830, TXL850 and TXL870 Extra Loads comprise resistive loads. They can be used together with TOR KEL Load Units to increase loading capability. The TXL Extra Loads can not provide regulation by themselves but TOR KEL measures total current from the battery and regulates the load characteristic. When TOR KEL is stopped it sends a stop signal to the TXL Extra Load.

The three models have different maximum voltage ratings:

| | |
|--------|-------|
| TXL830 | 28 V |
| TXL850 | 56 V |
| TXL870 | 280 V |

TOR KEL Win software (optional)

The TOR KEL Win program, which runs on a PC under Windows®, builds up a voltage curve on the screen in real time and displays the current, voltage and capacity readings. You can also use TOR KEL Win to control TOR KEL during the test. The program stores the results in a text file, and it can generate reports

2 Safety

Symbols on the instrument



Caution, refer to accompanying documents.



Caution, risk of electric shock.



Hot, do not cover



Protective conductor terminal.



WEEE, Waste Electrical and Electronic Equipment. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements.

Safety instructions

Warning

The electrical voltage and current used in battery testing is potentially lethal.

Ensure that the AC supply is isolated and any battery under test is disconnected before attempting any cleaning or maintenance of TORKEL.

Do not connect or disconnect any of the cables unless the circuit breaker F1 is in the lower (OFF) position.

Connection and disconnection procedures are extremely important. Be sure to follow the instructions faithfully.

Do not touch conducting parts of the clamps on the current cables or the voltage sensing cables when they are connected to TORKEL.

Explosion risk when using Torkel and TXL (all models)

When a lead acid battery is charged or discharged i.e. when there is a current flow through the battery it is always a risk that the battery can explode.

For new open (vented) batteries the risk is medium to low but in old VRLA (sealed) batteries the risk is medium to high.

If there is a bad connection inside the battery and there is a current flow - the connection will burn off and there will be an arc, which will ignite the oxygen-hydrogen gas in the battery.

To minimize the risk for personnel injuries: Always place Torkel/TXL as far away from the battery as possible - use long current cables and/or remote start/stop. Never stand close to a battery during charge/discharge.

Too high discharge current applied on a battery can cause the battery to explode or get over-heated. Be sure to not set too high current.

If the external current measurement is interrupted or giving false values during the test, the current will rise to a higher level than the set value before the test is shut down. If the battery is too small for this current or in a bad condition - it may explode.

When using the external current measurement function:

1. Check that the CT is connected in the right current direction.
 - 2 Always replace the CT internal battery before a test.
 - 3 Set the correct current ratio in the external current measurement menu.
-

Never use the TOR KEL/TXL Extra Load in an explosive environment. Never put the TOR KEL/TXL Extra Load where it can be reached by battery gas.

Improperly connected cables carrying high current can cause fire. Make sure that the cables are not twisted in such a way that could cause them to turn and come loose from the connector.

Position TOR KEL/TXL Extra Load where air flow is unobstructed and where it does not come into contact with any flammable or heat-sensitive material. Keep a free distance of 1.5 m (5 ft) to the vertical sides of TOR KEL/TXL and 2.0 m (6.5 ft) above TOR KEL/TXL.

Do not place TOR KEL a) near another TOR KEL, a TXL Extra Load or any other heat source or b) where the cooling airflow can be blocked. TOR KEL will overheat if there is insufficient cooling.

External current shunt may not be used above 300 V DC



Important!

Make sure that the clamp-on ammeter is properly connected and that its battery lasts throughout the entire test. If external current measurement malfunctions, TOR KEL might provide a higher load current than intended.

Do not use liquid detergents or aero-sols when cleaning TOR KEL or TXL units. Use a damp cloth.

If TOR KEL has been stored below freezing for an extended period of time, you must allow 3 hours for it to adapt to room temperature.

3

Menu system

Main menu

When you start a profile test you will be asked for the number of steps, the test duration (time) and the load value for each step.

Results

Displays voltage, capacity, current and testing period (time) from the last test.

Test battery

Submenu used to perform a test.

Auto-limits

Submenu used to provide automatic calculation and setting of limit values. Here, you specify the desired voltage per cell at which a) warnings are to be issued and b) the test is to be stopped. Examples: warning at 1.85 V/cell and stop at 1.75 V/cell. Then, when you begin a test, TORHEL asks you to enter the number of cells, whereupon it calculates the voltage and sets this voltage as the limit.

Memory

You can save and recall the settings in any of 9 memories. Moreover, you can recall the factory (standard) settings.

Select language

Here, you select the language that will be used in the display.


Basic settings

Here, you specify whether the current is to be measured internally within TORHEL or by means of a clamp-on ammeter. You can also adjust TORHEL to the mV/A ratio that appears on the clamp-on ammeter itself.

Test method

Here you specify one of the following test methods: constant current, constant power, constant resistance, current profile or power profile.

4 Control panel

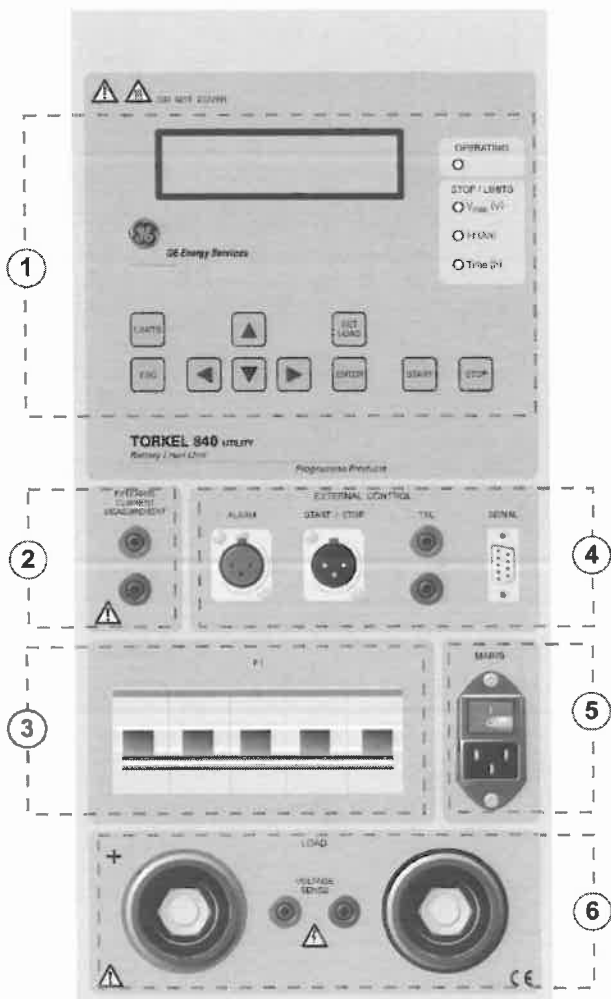

① Operator control

Display

Display settings during programming and measured values during operation.

Keys

<LIMITS> key. Press to enter the LIMITS MENU

<ESC> key. Press to exit from a function without changing any data or to go backwards in the menu system.

Horizontal and vertical arrow keys, \leftarrow \rightarrow ∇ \blacktriangle . Used to select data and to change values.

<SET LOAD> key. Press to change the load.

<ENTER> key. Press to select and confirm parameters.

<START> key. Press to start discharging.

<STOP> key. Press to stop/pause discharging.

Lamps OPERATING

a) LED will glow steadily while TORCEL is discharging.

b) LED will flash when the current (or power) can not be regulated to the desired value.

V_{min} (V)

a) LED will glow steadily after TORCEL has shut down because the voltage has dropped to the stop limit.

b) LED will flash when the voltage has decreased to the warning limit.

I_{st} (Ah)

a) LED will glow steadily when TORCEL has shut down because the discharged capacity has reached the stop limit.

b) LED will flash when the discharged capacity has exceeded the warning limit.

Time (h)

a) LED will glow steadily when TORCEL has shut down after completing the preset time cycle

b) LED will flash when the time has exceeded the warning limit.

② External current measurement

External current measurement

Input used to measure current in an external path by means of a clamp-on ammeter or a current shunt.

Input impedance: 1 Mohm. Galvanically isolated.

Insulation voltage to battery current terminals: 2300 V

Insulation voltage to ground: 1350 V

③ Circuit breaker

F1

Voltage controlled circuit breaker that connects / disconnects the loading circuits in TORCEL from the battery.

Note F1 will not latch in upper (ON) position until TORDEL has issued a message reading "Switch on F1".

④ External control

ALARM

Output equipped with a relay contact for triggering an external alarm device

Relay contact: 1 A / 100 VAC, 1 A / 50 VDC, 0.3 A / 250 VDC. This latter (250 V DC) is valid for resistive load only.

Connector insulation: Voltage to ground may not exceed 250 V

START/STOP

Input used for starting and stopping discharging from an external device. Galvanically isolated.

TXL

Output used for control of TXL Extra Loads. Galvanically isolated.

SERIAL

Serial port used for connection to a PC or other controlling equipment.

⑤ Mains

MAINS

Connector for mains supply, equipped with ON/OFF switch.

⑥ Connection terminals for the battery

+ (Terminal)

Positive (+) current connection for battery being tested.

– (Terminal)

Negative (-) current connection for battery being tested.

Insulation voltage to ground: 2200 V

VOLTAGE SENSE

Input for sensing voltage at the battery terminals.

Impedance to the battery current terminals is >1 Mohm.

5

Conducting a test

Test at constant current

Safety precautions



Warning

Do not connect or disconnect any of the cables unless the circuit breaker F1 is in the lower (OFF) position.

Never use TORDEL/TXL Extra Load in an explosive environment. Never put TORDEL/TXL Extra Load in direct contact with battery gas.

Position TORDEL/TXL Extra Load so that the air flow is unobstructed and free from contact with any flammable or heat-sensitive material.

Do not place TORDEL near another TORDEL, a TXL Extra Load or any other heat source. TORDEL will overheat if there is insufficient cooling.

Inspect cable connections to make sure there is no short circuit.

Preparations for testing

- 1] Connect TORDEL to the mains voltage.
- 2] Switch on TORDEL.
The following display will appear for a short time:

TORDEL 840 R01A

It will then change to:

MAIN MENU
Test battery

and then:

Connect battery


Note Press *ESC* if you want to access the main menu.

Important

Connection and disconnection procedures are extremely important. Be sure to follow the the instructions faithfully.

Connecting the current cables to the battery

Use the cables supplied with TORDEL or other cables of suitable size. Follow the numbered steps that are set forth below. Inspect each connection to make sure it is securely fitted.

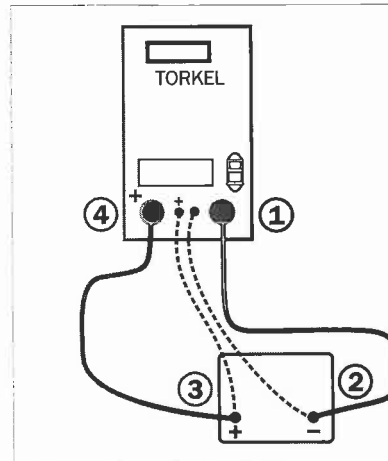

Connecting TORDEL to a battery.

- 1] Connect one end of the first cable to the negative (-) terminal on TORDEL.
- 2] Connect the other end of the first cable to the negative (-) pole of the battery.
- 3] Connect one end of the second cable to the positive (+) pole of the battery.
- 4] Connect the other end of the second cable to the positive (+) terminal on TORDEL.

Tip To get a more accurate voltage reading. Connect the voltage sensing cables between the "VOLTAGE SENSE" input on TORDEL and the battery terminals.

**Warning**

Do not disconnect any of the above cables until the test is completed and the circuit breaker F1 is in the lower (OFF) position.

Note TOR KEL automatically selects the voltage range when voltage is applied to the high-current terminals.

Setting the current

- 1) Use the horizontal arrow keys (◀ or ▶) to select the position and the vertical arrow keys (▼ or ▲) to set the value.

Set Current
0001.0 A

- 2) Press <ENTER>. After connecting the battery, about 30 seconds must elapse before you can switch on the circuit breaker F1 and start the test. TOR KEL displays the amount of time you must wait as follows:

Please wait...
25 sec

When the time shown has elapsed, the following will appear:

Switch on F1
Press ENTER

- 3) Switch on F1 (press the lever upwards a second time if it fails to latch immediately).
- 4) Confirm by pressing <ENTER>. TOR KEL now displays the values currently in effect:

51.6V 0.0 Ah
0.0 A 0:00:00

Tip You can change the current at any time by pressing the <SET LOAD> key.

Warning and stop limit parameters

You can set TOR KEL to issue a warning and/or to stop:

- When the voltage has reached a certain level.
- When a certain amount of capacity is discharged.
- After a specified time.

The settings for the warning and stop levels are independent of each other.

When a limit is reached, the contacts in the ALARM relay operate and a buzzer sounds. In addition, the lamp associated with the parameter on the control

panel flashes when the warning level is reached and starts to glow steadily if TOR KEL is stopped. See also the chapter headed "Alarm function".

Limits set-up

- 1) Press <LIMITS>

Warning Umin
No 044.4 V

- 2) Use the horizontal arrow keys (◀ or ▶) to move the cursor and the vertical arrow keys (▼ or ▲) to activate the warning (Yes) and to set the voltage level.
- 3) Press <ENTER>
- 4) Proceed in the same way for other parameters you want to change.
- 5) Press <LIMITS> when you have finished setting the parameters.

The limits can be changed at any time during a test.

Starting the test

- 1) Press <START>. The current value (A) will be displayed and the OPERATING lamp will light up.

Pausing the test

- 1) Press <STOP>.
- 2) Restart by pressing <START>.

Note Any TXL Extra Loads connected to TOR KEL must be restarted manually.

Ending the test

- 1) Press the <STOP> key.
 - 2) Press <ESC>
- End Test?**
Yes No
- 3) Select "Yes" and press <ENTER>.

6

Testing at constant power / resistance

Constant power

TORDEL can be used to conduct a discharge test at constant power instead of constant current. All procedures are the same except that you must set TORDEL differently before starting – you set the power instead of the current.

**Warning**

See the chapter "Conducting a test" for safety precautions and how to prepare the test.

Important

When testing at constant power, the current will increase as the voltage decreases. Calculate the current at the end of the test ($W / V = A$). Then make sure that the total current does not exceed 2999 A. Also make sure that the TORDEL and TXL units can provide the required current load throughout the test.

Configuring TORDEL for constant power

- 1] Calculate the current at the end of the test (divide the power by the voltage). Then make sure that the total current does not exceed 2999 A and that the TORDEL and TXL units can load with the required current throughout the test.
- 2] Press <ESC> repeatedly until you see the "MAIN MENU".
- 3] Select "Test method" using the vertical arrow keys (▼ or ▲) and press <ENTER>.
- 4] Select "Constant P" and press <ENTER>.
- 5] Select "Test battery" and press <ENTER>.
- 6] Set the discharge power in the same way that you set the current. See the chapter 5 "Conducting a test".

Constant resistance

**WARNING!**

See the chapter "Conducting a test" for safety precautions and how to prepare the test

Configuring TORDEL for constant resistance

- 1] Press <ESC> repeatedly until you see the "MAIN MENU".
- 2] Select "Test method" using the vertical arrow keys (▼ or ▲) and press <ENTER>.
- 3] Select "Constant R" and press <ENTER>.
- 4] Select "Test battery" and press <ENTER>.
- 5] Set the resistance value in the same way that you set the current value. See the chapter headed "Conducting a test".

7

Testing with a load profile

General

TORHEL can be used to conduct a test that incorporates a current profile or power profile. A profile can consist of up to 19 time intervals. The duration and the magnitude of the load can be specified for each interval.

Preparations

To configure TORHEL for a profile test, proceed as follows:

- 1] Press <ESC> repeatedly until you see the "MAIN MENU".
- 2] Select "Test method" using the vertical arrow keys (▼ or ▲) and press <ENTER>.
- 3] Select "PROFILE I" for a current profile (or "PROFILE P" for a power profile) and press <ENTER>.

Testing

- 1] Select "Test battery" and press <ENTER>.

Set Profile?

Yes No

- 2] Select "Yes" and press <ENTER> if you want to set up the profile.

No. of Intervals?

02

- 3] Specify the number of time intervals you want to include in the profile and press <ENTER>.

SET T1

0:00:01 001.0A

- 4] Set the duration of the first time interval and the current (or power) value. Press <ENTER>.

- 5] Set the other intervals in the same way.

Starting the test

Proceed in the same way as set forth in the chapter headed "Conducting a test".

8

External current measurement

General

The external current measurement function enables TORHEL to measure the total current in an external path and base regulation on this measurement.

A DC clamp-on ammeter (optional accessory) has to be used for this measurement. It can be applied at one of the battery terminals or at an inter-cell connector. The clamp-on ammeter must measure the total current, including that which passes through TORHEL.

A current shunt can also be used, but this requires opening the current path and connecting the shunt in series. The current shunt must be connected to the negative side of the battery.



Warning

External current shunt may not be used above 300 V DC

Important


The current shunt must be connected on the negative side of the battery.

Tip


For tests where it is important to obtain the desired current within a few seconds or less it is better to use internal current measurement since it provides faster regulation.

Applications

- External current measurement must be used when TORHEL is working together with TXL Extra Loads.
- Testing without disconnecting the regular load. Since total current is measured, TORHEL can compensate for changes attributable to the regular load. The total current from the battery is then kept at a constant value. This ensures accurate test results.

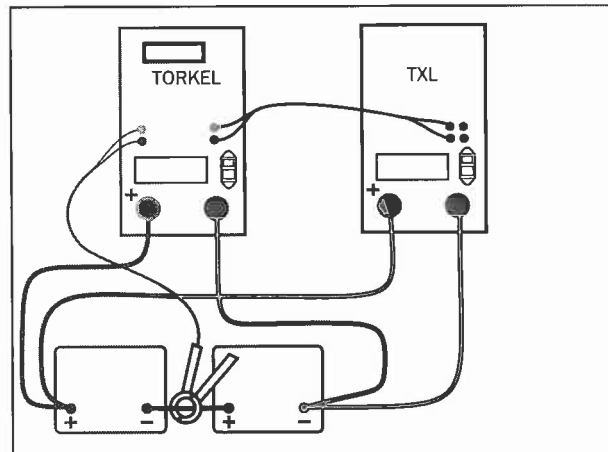


TORHEL used together with TXL Extra Load

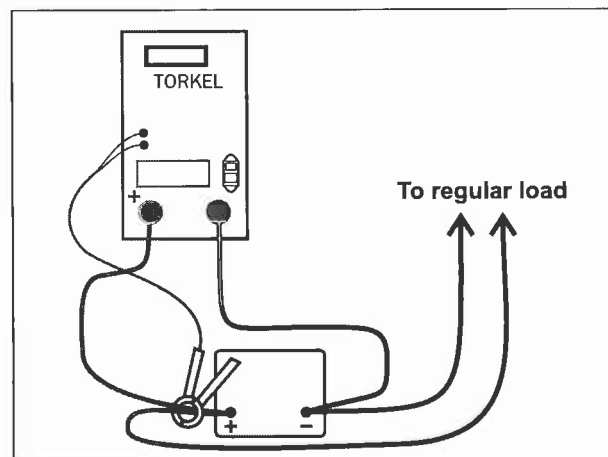

Constant current, regular load connected.

- Two or more TORHEL and TXL units can be used for discharging at up to 2 999 A.

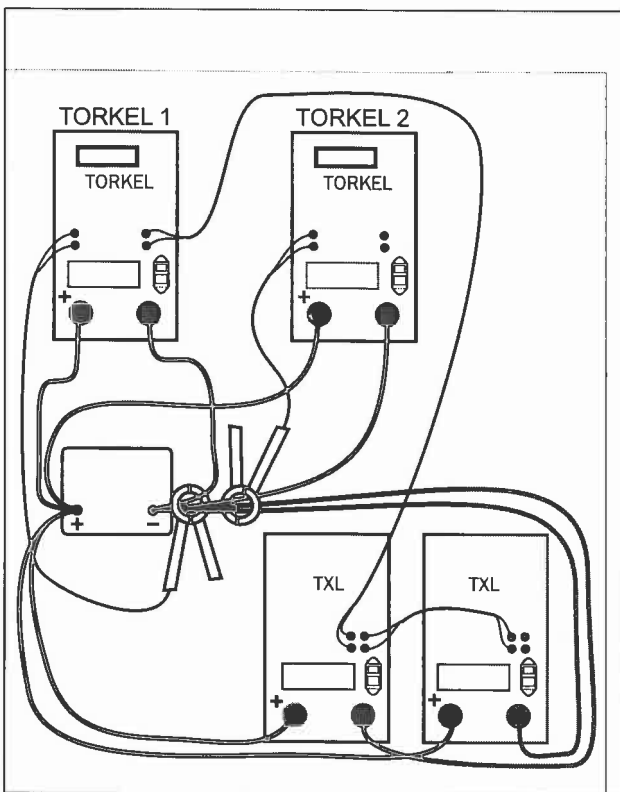

Two TORKEL units operating together using the external current measurement function.

Setting up external current measurement

TORKEL

- 1] Press <ESC> repeatedly until you see the "MAIN MENU".
- 2] Select "Basic settings" using the vertical arrow keys (▼ or ▲) and press <ENTER>.

```
MAIN MENU
Basic settings
```

- 3] Press <ENTER> to obtain:

```
I MEASUREMENT
Internal
```

- 4] Press <ENTER>.
- 5] Select "External" using the vertical arrow keys (▼ or ▲) and press <ENTER>.
- 6] Set the mV/A value to the value specified on the DC clamp-on ammeter and press ENTER.

```
I MEASUREMENT
Ext. 01.0 mV/A
```

The mV/A ratio for the input can be set to a value between 0.3 mV/A and 19.9 mV/A.

Important

The clamp-on ammeter output voltage must not exceed 1 V.

DC clamp-on ammeter

Note *Make sure that the clamp-on ammeter has fresh batteries. The batteries must last throughout the entire test!*

- 1] Place the clamp-on ammeter as far as possible from any magnetic field
- 2] Connect a DC voltmeter (set to 2 V full scale) to the clamp-on ammeter.
- 3] Switch on the clamp-on ammeter and adjust its zero knob to set the output to 0.0 V

Note *The clamp-on ammeter must be accurate and calibrated and it must be able to carry a load of 600 kΩ. Please note that a DC clamp-on ammeter is usually less accurate in the lowest part of its measurement range.*

Tip Always activate the warning and stop limit functions when using external current measurement. This will protect your batteries if the DC clamp-on ammeter were to malfunction.

Connections



Warning

Make sure the polarity is correct.

- 1] Connect the clamp-on ammeter to the EXTERNAL CURRENT MEASUREMENT input. Best results are obtained if the cables running from the clamp-on ammeter are twisted.
- 2] Apply the clamp-on ammeter to the conductor. See the figures in the section headed "Applications".

Note: The arrow on the clamp-on ammeter must point in the same direction as the current flow.

Note: The clamp-on ammeter must always be applied in such a way that current through TORKEL is included in the measurement.
- 3] Turn on the power switch on the clamp-on ammeter.

Troubleshooting

If the following message appears when you start the test:

Error:
External I


- 1] Check that the clamp-on ammeter is properly connected to TORKEL. Also check the polarity.
- 2] Check that the clamp-on ammeter is switched on.
- 3] Check that the clamp-on ammeter has fresh batteries.
- 4] Make sure that the clamp-on ammeter is clamped in the correct direction. A DC clamp-on ammeter normally has an arrow which should point in the direction which current flows through the conductor.
- 5] Check the following settings in "Basic setting" submenu:
 - "I measurement" must be set to "External".
 - The mV/A ratio must match the ratio that appears on the clamp-on ammeter itself.

9 Alarm function

Description

The TORHEL alarm function is provided by a buzzer and a relay connected to the <ALARM> - connector. An external alarm device can be connected to this connector if so desired.

When an alarm is issued, the relay closes the circuit between pin 2 and 3. (While no alarm is issued, the circuit between pin 1 and 3 is closed.)

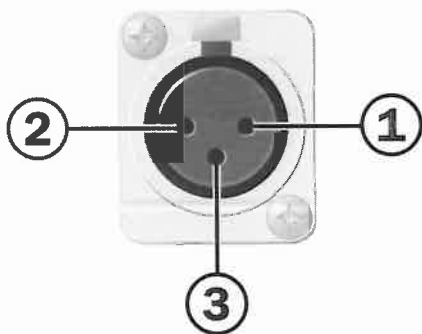

Male connector for this terminal is "Neutrik NC3MX".

Relay contact

8 A / 28 V DC

0.28 A / 250 V DC (resistive load only)

8 A / 240 V AC

Connector insulation

Voltage to ground must not exceed 250 V.

The following events can cause an alarm to be issued

- Warning level is passed.
- Discharging is stopped because a stop level is reached.
- TORHEL can not regulate the current to the desired level.
- Thermal protection device trips or a fan has stopped rotating.
- The connection to the battery is broken.
- The mains (line) power to TORHEL is interrupted while a test is in progress.
- Other fault situations such as battery voltage too high or too low or excessive current through TORHEL.

Note *The alarm output will be activated if TORHEL is switched off and also if no mains voltage is present. When TORHEL is switched on, the alarm is reset automatically provided that a test was not in progress when the mains power was cut off.*

Resetting the alarm

You can reset the alarm by pressing any key.

10 Auto-limits

Invoking the auto-limits function

The auto-limits function automatically calculates and sets the limit values. Here, you must specify the voltage per cell at which you want a warning to be issued and the voltage per cell at which you want TORHEL to stop discharging the battery.

When you start the test, TORHEL asks you to enter number of cells and then sets the limits automatically.

This function can also be used to simplify the task of setting capacity and time limits.

Activating auto-limits

- 1] Press <ESC> repeatedly until you see the "MAIN MENU".
- 2] Select "Auto-limits" using the vertical arrow keys and press <ENTER>.

| Warning | Vmin |
|-----------|------------|
| <u>No</u> | 1.85V/cell |

- 3] Use the vertical arrow keys (▼ or ▲) to activate the auto-limits function ("Yes") so that it will issue voltage warnings.
- 4] Set the voltage value/cell value.
- 5] Press <ENTER>.

| Stop | Vmin |
|-----------|-------------|
| <u>No</u> | 1.80 V/cell |

- 6] Use the vertical arrow keys (▼ or ▲) to activate the auto-limits function so that it will provide voltage stops.
- 7] Set the voltage value/cell value.
- 8] Press <ENTER>.

Using the same procedure as that set forth above, you can set TORHEL to:

- Issue a warning when, say, 50 % of the test period (time) has elapsed.
- Stop discharging when, say, 100% of the test period (time) has elapsed.
- Issue a warning when, say, 50% of the rated capacity is discharged.
- Stop discharging when, say, 100% of rated capacity is discharged

When you start the test, TORHEL will ask you to enter the number of cells, the length of the test period (time) and the rated capacity.

11 TORHEL connected to a PC

General


TORHEL can be connected to a PC and controlled by the TORHEL Win program. TORHEL also supports communication with the TMC95 program that was created to conduct capacity tests together with the TMC4001 Multi-Channel Data Logger.

TORHEL Win program

The TORHEL Win program builds up a voltage curve on the screen while the test is running and presents the current, voltage and capacity values in a scrollable table. Moreover, you can control TORHEL from TORHEL Win during the test, print out a report and store the measured values in a text file, which can be imported easily into Microsoft® EXCEL.

Because TORHEL always stores the total voltage curve during the test (one curve can be stored), you can also connect TORHEL to a PC after the test, transfer the voltage curve, examine it and store it as a file using TORHEL Win.

TORHEL Win features

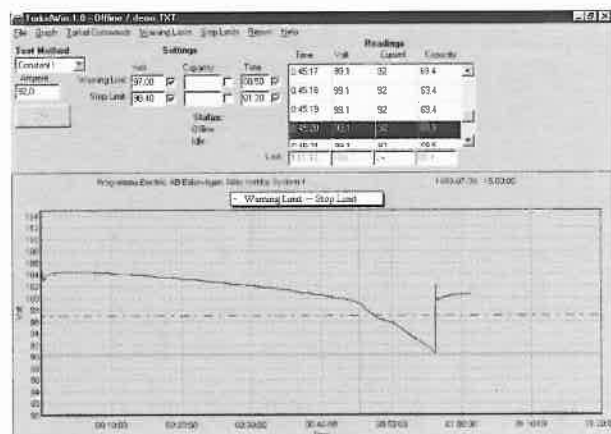

Example of a discharge voltage curve

Displayed while test is running (or retrieved later from a file)

- Voltage curve
- Voltage, current and capacity in tabular form.

Commands that can be issued to TORHEL

- Set the test method
- Set the load (current, power or resistance)

- Set current or power profile
- Set warning and stop limits
- Start the test
- Pause the test
- Restart the test
- Reset the alarm
- Lock / unlock TOR KEL-panel
- Set current measurement
- Set sample rate

Reporting

- Fill in report
- Copy voltage curve to clipboard

Other commands

- Transfer voltage curve from TOR KEL
- Load a new language into TOR KEL

TOR KEL Win is delivered with every TOR KEL. However a software key must be loaded into the TOR KEL in order to make it able to communicate with TOR KEL Win. This key can be purchased from Programma.

You can evaluate the program without the key since a file containing test data is included. Select "Files", "Open" and double-click "demo".

Note *You do not need a software key for loading a new language into TOR KEL.*

Installing TOR KEL Win

The TOR KEL Win software package consists of:

- One diskette containing the TOR KEL Win program. Provided that you have ordered TOR KEL Win, the diskette also contains a software key.
- One CD containing TOR KEL Win and other languages than English
- Serial cable

Requirements on your PC

- PC with Pentium processor
- Display with at least 640 x 480 pixels
- Windows 95/98/2000/NT/XP
- An unoccupied serial port

Installation

- 1] Insert the program diskette or the CD.
- 2] Click "Start" and then "Run".
- 3] Type "A:\TOR KEL Win_Setup" or the drive for CD e.g. "D:\ TOR KEL Win_Setup".
- 4] Follow the installation wizard instructions which guide you through the installation procedure.

Setting up communication

- 1] Connect the serial port on TOR KEL to the serial port on the PC using a straight pin-to-pin cable.
- 2] Start the TOR KEL Win program.
- 3] Select the desired communication port ("Direct to COM1" for example) when TOR KEL Win asks for device selection.
- 4] Switch on TOR KEL.
- 5] Wait until TOR KEL Win indicates "Online". (This appears under "Status" in the window.)

Loading the software key

Note *If you purchase a TOR KEL together with TOR KEL Win the software key is already loaded.*
If you do not have a diskette drive contact GE Energy Programma for delivery of the software key.

- 1] Proceed as stated in the section headed "Setting up communication"

- 2] Select "File" and click "Load Software key". Put the program diskette into the PC and instruct TORDEL Win to open the file with extension .key on the diskette.

Changing the language used in TORDEL

You can replace one of the languages in TORDEL with the contents in the language file.

- 1] Proceed as set forth in the section headed "Setting up communication"
- 2] Select "TORDEL Commands," and click "Download Language". Insert the Torkel Win CD into your CD drive and instruct TORDEL Win to open the desired language file.

Testing with TORDEL Win

- 1] Proceed as set forth in the section headed "Setting up communication".
- 2] Proceed as set forth in the sections headed "Preparations" and "Setting the current" in the chapter headed "Conducting a test". Note, however, that F1 must be switched on before you start conducting test with TORDEL Win.
- 3] Select test method. Select current or power or resistance as desired. Set the desired warning limits and start the test with TORDEL Win.
- 4] Proceed as set forth in the section headed "Setting up communication".
- 5] Proceed as set forth in the sections headed "Preparations" and "Setting the current" in the chapter headed "Conducting a test". Note, however, that F1 must be switched on before you start conducting test with TORDEL Win.
- 6] Select test method. Select current or power or resistance as desired. Set the desired warning limits and start the test with TORDEL Win.


Viewing the results

- 1] Select the "RESULT" submenu via which you can read the values that were valid at the end of the last test. Voltage and discharged capacity are displayed in the first line.
- 2] Press the vertical up arrow key (▲) key to view current and time. You can scroll up and down among the displayed items with the vertical arrow keys (▼ or ▲).
- 3] Press <ENTER> to leave the sub-menu.

12 Starting and stopping from an external device

Start/stop connector

Discharging can be started and stopped from external equipment via the connector named START/STOP.

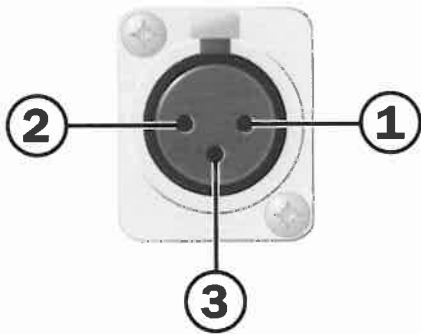

Male connector for this terminal is "Neutrik NC3MX".

The start/stop circuits are galvanically isolated from other circuits in TORKEL.

Two or more TORKEL units can be started simultaneously since the START/STOP connectors can be connected in parallel and triggered by a single contact.

Starting

- 1] Connect a dry contact to pin 2 and pin 3 in the connector.

Closing and then opening the contact will cause TORKEL to start the discharge.

5 V is supplied for the dry contact and the current is limited internally to about 5 mA.

Stopping

- 1] Connect a dry contact to pin 1 and pin 3 in the connector.

Closing and then opening the contact will cause TORKEL to stop the discharge.

5 V is supplied for the dry contact and the current is limited internally to about 5 mA.

13 How to obtain the desired current

General

You must make some simple calculations before starting a test to find out whether or not TORKEL will be able to provide the desired load current. You must also make certain that TORKEL will be able to sustain this current until the test ends. TORKEL regulates current by lowering its internal resistance as the voltage drops. However, the resistance elements built into TORKEL impose a limit beneath which further lowering is impossible.

TORKEL load capacity

The following tables present the TORKEL built-in current limitation (I_{max}) and also the resistance of the built-in resistance elements for the different voltage ranges.

| TORKEL 820 | | | |
|------------|---------------------------|-------------------------------|---|
| Range | Max current (I_{max}) | Internal resistance (nominal) | Lowest voltage at which I_{max} can be obtained ¹⁾ |
| 10-27.6 V | 270 A | 0.069 Ω | 21.3 V |
| 10-55.2 V | 270 A | 0.138 Ω | 39.9 V |

1) Requires use of two standard cables, 3 m (10 ft), 70mm² (1.5 m Ω).

| TORKEL 840/860 | | | |
|----------------|---------------------------|-------------------------------|---|
| Range | Max current (I_{max}) | Internal resistance (nominal) | Lowest voltage at which I_{max} can be obtained ²⁾ |
| 10 - 27.6 V | 110 A | 0.165 Ω | 20.8 V |
| 10 - 55.2 V | 110 A | 0.275 Ω | 32.9 V |
| 10 - 144 V | 110 A | 0.550 Ω | 63.1 V |
| 10 - 288 V | 55 A | 3.3 Ω | 184 V |

2) Requires use of two standard cables, 3 m (10 ft) / 25 mm², (4 m Ω).

Calculating current

I_{max}

Check that the desired current load is not greater than the I_{max} for the TOR KEL unit in question (column 2 in the tables above).

Max power

For the 10 – 480 V range on TOR KEL 860, you must also check to see that current multiplied by maximum voltage does not exceed the 15 kW power limit.

Final voltage

If the final voltage is lower than the value set forth in column 4 (in the table above), the internal TOR KEL resistance will limit the current so that it will be impossible to reach I_{max} (column 2 in the table above). In such case, you can calculate the current that will be obtained at the final voltage as follows:

- 1] Add the TOR KEL internal resistance (column 3) to the cable resistance (which is 1.5 mΩ for TOR KEL 820 and 4 mΩ for TOR KEL 840/860 if you are using standard cables).
- 2] Subtract 2.2 V from the final voltage and divide by the resistance you obtained in step one (above).

Example: The final voltage is 10.8 V, and you want to find the maximum possible current at this voltage if you are using a TOR KEL 840 and the voltage range is 10 – 27.6 V.

Calculate the resistance as follows:

$$0.165 \Omega + 0.004 \Omega = 0.169 \Omega$$

Calculate the maximum current as follows:

$$(10.8 \text{ V} - 2.2 \text{ V}) / 0.169 \Omega = 50.9 \text{ A}$$

Examples of load capacities

TOR KEL 820

| 12 V battery (6 cells) ¹⁾ | | |
|---------------------------------------|------------------|----------------|
| Final voltage | Constant current | Constant power |
| 1.80 V/cell (10.8 V) | 0 – 121 A | 0 – 1.31 kW |
| 1.75 V/cell (10.5 V) | 0 – 117 A | 0 – 1.23 kW |
| 1.67 V/cell (10.0 V) | 0 – 110 A | 0 – 1.10 kW |
| 24 V battery (12 cells) ¹⁾ | | |
| 1.80 V/cell (21.6 V) | 0 – 270 A | 0 – 5.8 kW |
| 1.75 V/cell (21.0 V) | 0 – 266 A | 0 – 5.59 kW |
| 1.60 V/cell (19.2 V) | 0 – 241 A | 0 – 4.63 kW |
| 48 V battery (24 cells) ¹⁾ | | |

| | | |
|-------------------------------------|-----------|-------------|
| 1.80 V/cell (43.2 V) | 0 – 270 A | 0 – 11.6 kW |
| 1.75 V/cell (42.0 V) | 0 – 270 A | 0 – 11.3 kW |
| 1.60 V/cell (38.4 V) | 0 – 259 A | 0 – 9.9 kW |
| 1) 2.15 V per cell when test starts | | |

TOR KEL 840/860

| 12 V battery (6 cells) ¹⁾ | | |
|---|------------------|----------------|
| Final voltage | Constant current | Constant power |
| 1.80 V/cell (10.8 V) | 0 – 50.0 A | 0 – 0.54 kW |
| 1.75 V/cell (10.5 V) | 0 – 49.0 A | 0 – 0.51 kW |
| 1.67 V/cell (10.0 V) | 0 – 46.0 A | 0 – 0.46 kW |
| 24 V battery (12 cells) ¹⁾ | | |
| 1.80 V/cell (21.6 V) | 0 – 110 A | 0 – 2.37 kW |
| 1.75 V/cell (21.0 V) | 0 – 110 A | 0 – 2.31 kW |
| 1.60 V/cell (19.2 V) | 0 – 100 A | 0 – 1.92 kW |
| 48 V battery (24 cells) ¹⁾ | | |
| 1.80 V/cell (43.2 V) | 0 – 110 A | 0 – 4.75 kW |
| 1.75 V/cell (42.0 V) | 0 – 110 A | 0 – 4.62 kW |
| 1.60 V/cell (38.4 V) | 0 – 110 A | 0 – 4.22 kW |
| 110 V battery (54 cells) ¹⁾ | | |
| 1.80 V/cell (97.2 V) | 0 – 110 A | 0 – 10.7 kW |
| 1.75 V/cell (94.5 V) | 0 – 110 A | 0 – 10.4 kW |
| 1.60 V/cell (86.4 V) | 0 – 110 A | 0 – 9.5 kW |
| 120 V battery (60 cells) ¹⁾ | | |
| 1.80 V/cell (108 V) | 0 – 110 A | 0 – 11.9 kW |
| 1.75 V/cell (105 V) | 0 – 110 A | 0 – 11.5 kW |
| 1.60 V/cell (96 V) | 0 – 110 A | 0 – 10.5 kW |
| 220 V battery (108 cells) ¹⁾ | | |
| 1.80 V/cell (194 V) | 0 – 55 A | 0 – 10.7 kW |
| 1.75 V/cell (189 V) | 0 – 55 A | 0 – 10.4 kW |
| 1.60 V/cell (173 V) | 0 – 51.0 A | 0 – 8.82 kW |
| 240 V battery (120 cells) ¹⁾ | | |
| 1.80 V/cell (216 V) | 0 – 55 A | 0 – 11.9 kW |
| 1.75 V/cell (210 V) | 0 – 55 A | 0 – 11.5 kW |
| 1.60 V/cell (192 V) | 0 – 55 A | 0 – 10.5 kW |
| 1) 2.15 V per cell when test starts | | |

TOR KEL 860

| UPS battery (180 cells) ¹⁾ (TOR KEL 860) | | |
|---|----------|-----------|
| 1.70 V/cell (306 V) | 0 – 38 A | 0 – 15 kW |
| 1.60 V/cell (288 V) | 0 – 38 A | 0 – 15 kW |
| UPS battery (204 cells) ¹⁾ (TOR KEL 860) | | |
| 1.80 V/cell (367 V) | 0 – 34 A | 0 – 15 kW |
| 1.60 V/cell (326 V) | 0 – 34 A | 0 – 15 kW |
| 1) 2.15 V per cell when test starts | | |

When a single TORDEL isn't enough

When a single TORDEL cannot provide the current you need, you can:

- Connect one or more TXL Extra Loads to TORDEL.
- Connect two or more TORDELS in parallel.
- Connect two or more TORDELS and two or more TXL Extra Loads into a single system.

When two or more TORDELS are connected into a single system, you will normally use the "External current measurement" function. But in situations where it is important for current to be regulated to the correct value within a second or so, it is better to use two or more TORDEL units set for internal current measurement and no TXL Extra Loads since these latter must be started manually. To obtain the total current, you must then add the current values (amperages) shown on all TORDEL units. The TORDEL units can be started and stopped synchronously via the START/STOP input.

TXL Extra Loads connected to TORDEL

TXLs are resistive loads which are unable to provide any sort of regulation. Regulation is provided by TORDEL which measures the total current and keeps it constant. See the chapter headed "External current measurement" which shows how to connect the TXL(s) and TORDEL(s).

When TXL Extra Loads are connected to TORDEL, you must check:

- That the current flowing through the TXLs when the test is started is not higher than intended.
- That TORDEL has enough regulation capability a) to compensate for the drop in current through the TXLs at the end of the test and b) to set the current to the correct value at the beginning of the test.

Calculating how many TORDELS and TXLs are needed

1. Number of TXLs – Current flowing through TXL(s) at beginning of a test

At the beginning of the test, as high a percentage as possible of the current must flow through the TXLs, thereby providing the TORDEL(s) with as much reserve regulation capability as possible. However, the current through the TXLs must not, of course, exceed the desired current value (A).

Note Remember that the internal resistances of the TXLs can be set manually. For accurate calculation, add the cable resistance to the internal resistance.

- The current in an individual TXL can be obtained by dividing the voltage at the beginning of the test by the internal resistance of the TXL in question (see tables below).
- Calculate the number of TXLs that you can connect without exceeding the desired total current.

2. Current flowing through TXL(s) at final voltage

- Multiply the total current through the TXL(s) which you obtained in step 1 above by the final voltage, and then divide by the voltage at the beginning of the test.

3. Number of TORDELS – for the current regulation

The TORDEL or TORDELS in the system must regulate the current to the desired value and compensate for the drop in current through the TXL(s) that occurs at the final voltage.

- The amount of regulation needed can be obtained by subtracting the current value (A) obtained in step 2 above from the desired current.
- Calculate the number of TORDELS required for the current regulation.

4. Are all of the TXLs needed?

If the total load-providing capability of the TORDEL(s) exceeds the amount of regulation needed by a wide margin (as set forth in step 3 above), you can perhaps conduct the test with fewer TXLs. If this margin is wider than the current through one of the TXLs at the final voltage, this TXL is not needed.

| TXL830 | | |
|-------------|--|----------|
| Max voltage | Possible resistance settings (nominal) | Position |
| 28 V | 0.275 Ω | 1 |
| | 0.138 Ω | 2 |
| | 0.092 Ω | 3 |
| TXL850 | | |
| 56 V | 0.550 Ω | 1 |
| | 0.278 Ω | 2 |
| | 0.184 Ω | 3 |
| TXL870 | | |
| 140 V | 2.480 Ω | 2 |
| | 1.240 Ω | 3 |
| 280 V | 4,950 Ω | 1 |

Example

A lead-acid battery with 54 cells has to be tested at 250 A.

Voltage at the beginning of the test (Vstart) is:
116.1 V (54 x 2.15 V)

Voltage at end of the test (Vend) is:
97.2 V (54 x 1.80 V)

Since the current is so high, you must use TXLs. A TXL870 is suitable since it is rated for the voltage in question.

1 – Number of TXLs – Current flowing through TXL(s) at beginning of a test.

The current through a TXL870 set for a resistance of 2.48 Ω is 46.8 A, and current through a TXL870 with a resistance of 1.24 Ω is 93.6 A. If two TXLs are set to 1.24 Ω and one TXL is set to 2.48 Ω the current will be 234 A, and they can be connected without having the current exceed 250 A.

2 – Current flowing through TXL(s) at final voltage.

$234 \text{ A} \times 97.2 \text{ V} / 116.1 \text{ V} = 196 \text{ A}$

3 – Number of TORKELs – for the current regulation.

$250 \text{ A} - 196 \text{ A} = 54 \text{ A}$. A single TORKEL 840 is enough for this.

4 – Are all of the TXLs needed?

The loading capability of the TORKEL unit is 110 A at the final voltage. This exceeds the amount needed by $110 \text{ A} - 54 \text{ A} = 56 \text{ A}$. This unused margin is perhaps wide enough to eliminate the need for one TXL. At the end of the test, the current through the TXL that is set to 2.48 Ω is $97.2 \text{ V} / 2.48 \Omega = 39 \text{ A}$. Since the unused TORKEL margin is wider than 39 A, this TXL is not needed.

TORKEL/TXL system examples

Systems containing TORKEL 820 and TXL830

| 12 V battery (6 cells) | | |
|-----------------------------------|----------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORKEL 820 | Number of units TXL830 |
| 234 | 1 | 1 |
| 346 | 1 | 2 |
| 459 | 1 | 3 |
| 571 | 1 | 4 |
| 693 | 2 | 4 |
| 806 | 2 | 5 |
| 918 | 2 | 6 |
| 1031 | 2 | 7 |

| 24 V battery (12 cells) | | |
|-----------------------------------|----------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORKEL 820 | Number of units TXL830 |
| 495 | 1 | 1 |
| 720 | 1 | 2 |
| 945 | 1 | 3 |
| 1170 | 1 | 4 |
| 1440 | 2 | 4 |
| 1665 | 2 | 5 |
| 1890 | 2 | 6 |
| 2115 | 2 | 7 |
| 2340 | 2 | 8 |

Systems containing TORHEL 820 and TXL850

| 48 V battery (24 cells) | | |
|-----------------------------------|----------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 820 | Number of units TXL850 |
| 499 | 1 | 1 |
| 729 | 1 | 2 |
| 959 | 1 | 3 |
| 1189 | 1 | 4 |
| 1459 | 2 | 4 |
| 1688 | 2 | 5 |
| 1918 | 2 | 6 |
| 2148 | 2 | 7 |
| 2378 | 2 | 8 |
| 2608 | 2 | 9 |
| 2837 | 2 | 10 |

Systems containing TORHEL 840/860 and TXL870

| 110 V battery (54 cells) | | |
|-----------------------------------|--------------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 840/860 | Number of units TXL870 |
| 188 | 1 | 1 |
| 266 | 1 | 2 |
| 344 | 1 | 3 |
| 422 | 1 | 4 |
| 532 | 2 | 4 |
| 610 | 2 | 5 |
| 688 | 2 | 6 |
| 766 | 2 | 7 |
| 845 | 2 | 8 |
| 923 | 2 | 9 |
| 1001 | 2 | 10 |

Systems containing TORHEL 840/860 and TXL830

| 24 V battery (12 cells) | | |
|-----------------------------------|--------------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 840/860 | Number of units TXL830 |
| 263 | 1 | 1 |
| 445 | 2 | 1 |
| 670 | 2 | 2 |
| 895 | 2 | 3 |
| 1005 | 3 | 3 |
| 1230 | 3 | 4 |
| 1455 | 3 | 5 |

| 120 V battery (60 cells) | | |
|------------------------------------|--------------------------------|------------------------|
| Discharge from 2.15 to 1.75 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 840/860 | Number of units TXL870 |
| 194 | 1 | 1 |
| 278 | 1 | 2 |
| 363 | 1 | 3 |
| 473 | 2 | 3 |
| 557 | 2 | 4 |
| 642 | 2 | 5 |
| 726 | 2 | 6 |
| 810 | 2 | 7 |
| 895 | 2 | 8 |
| 979 | 2 | 9 |


Systems containing TORHEL 840/860 and TXL850

| 48 V battery (24 cells) | | |
|-----------------------------------|--------------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 840/860 | Number of units TXL850 |
| 264 | 1 | 1 |
| 449 | 2 | 1 |
| 679 | 2 | 2 |
| 909 | 2 | 3 |
| 1019 | 3 | 3 |
| 1249 | 3 | 4 |
| 1478 | 3 | 5 |

| 220 V battery (108 cells) | | |
|-----------------------------------|--------------------------------|------------------------|
| Discharge from 2.15 to 1.8 V/cell | | |
| Maximum constant current (A) | Number of units TORHEL 840/860 | Number of units TXL870 |
| 94 | 1 | 1 |
| 133 | 1 | 2 |
| 188 | 2 | 2 |
| 227 | 2 | 3 |
| 266 | 2 | 4 |
| 306 | 2 | 5 |
| 345 | 2 | 6 |
| 384 | 2 | 7 |
| 423 | 2 | 8 |
| 463 | 2 | 9 |

Test conducted using a system comprising TORCEL and TXL units

One of the TORCEL units (we shall call it TORCEL No. 1) is to measure the entire battery current. TORCEL No. 2 measures all current except the current through TORCEL No. 1. TORCEL No. 3 measures all current except the currents through TORCEL No. 2 and TORCEL No. 1 (and so forth). The last TORCEL measures only the current through itself and the TXLs.

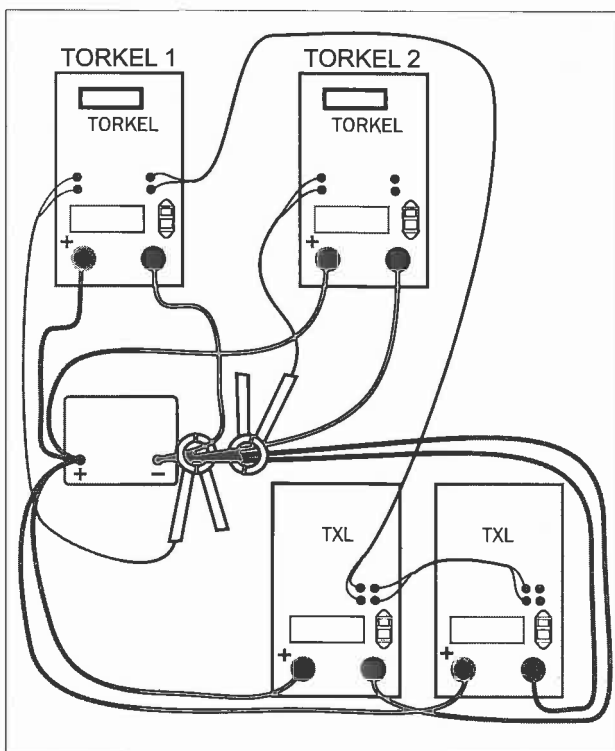

Example of a system comprising TORCEL and TXL units.

Hookup and settings



Warning

The chapter headed "Conducting a test" presents safety precautions and explains how to prepare for testing. Be sure to comply with what is set forth in this chapter.

- 1] Apply the clamp-on ammeters as illustrated above.


- 2] Set the desired total current (same value) on all TORCEL units.
As a result, the maximum regulation capability of all TORCEL units will be used. You do not need to pay any attention to the message reading "Cannot regulate" as long as it does not appear on TORCEL No. 1.
- 3] Set warning limits only on TORCEL No. 1.
- 4] Set the stop limits. The voltage and test period (time) can be set on each individual TORCEL. Stopping after a certain capacity (Ah) is reached can only be activated on TORCEL No. 1.

Note Only TORCEL No. 1 is to control the TXLs.
Only TORCEL No. 1 is to be connected to the PC.

Starting discharge

- 1] Set switch <F1> to the upper (ON) position on the TXLs.
- 2] Then start the TORCEL that has the highest number (when numbered as set forth above). Now start the TORCEL with the second highest number, then the third highest, etc. Finally, start TORCEL No. 1. Starting the TORCELs in this order prevents the current from being higher than desired at the beginning of the test.

14 TXL Extra Loads

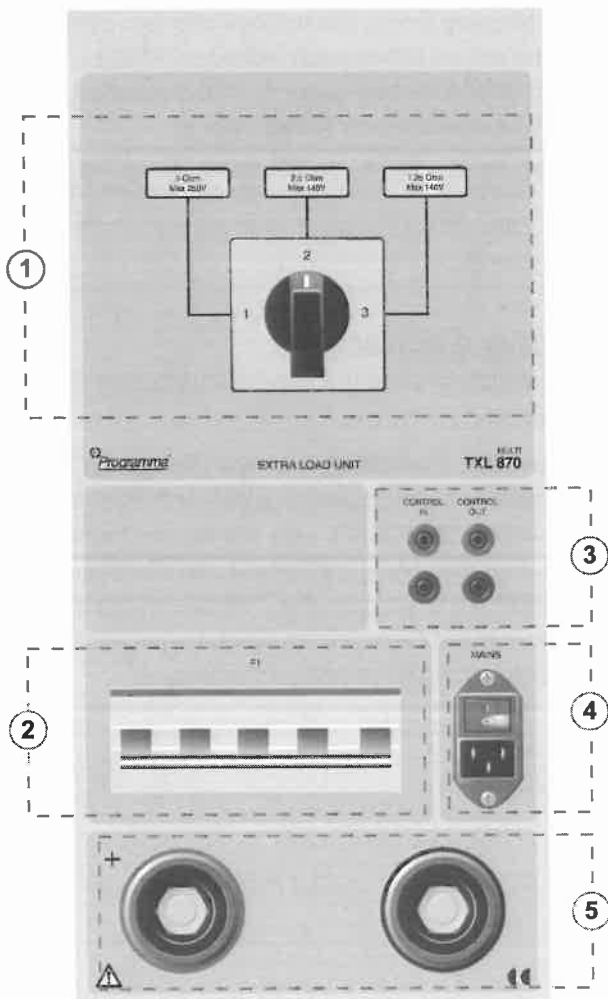

3 – Connection terminals for the battery

+ (Terminal)

Positive (+) current connection for battery being tested.

- (Terminal)

Negative (-) current connection for battery being tested.

Insulation voltage to ground: 2200 V

4 – Control

CONTROL IN

Input for control signal from TORKEL-unit. Galvanically isolated.

CONTROL OUT

Output used for the control signal sent from TORKEL to the adjacent TXL-unit. Galvanically isolated.

5 – Mains

MAINS

Connector used for mains supply, equipped with ON/OFF switch.

1 – Selector switch

Selector switch used to set the desired voltage range and/or resistance value.

2 – Circuit breaker

F1

Voltage-controlled circuit breaker that connects the resistors in the TXL Extra Load to the battery.

Note F1 will not latch or remain at upper (ON) position unless the mains switch is turned on and a control signal from TORKEL is present at the "CONTROL IN" input. Furthermore, TORKEL must be in the "Test battery" sub-menu.

Setting up the extra load

When an extra load is to be used, you must use the external current measurement function (see the chapter headed "External current measurement").

Important

Never connect a TXL to a voltage higher than specified for the range in question.

- 1] Set the range selector switch to the desired position.
- 2] Connect as shown in the illustrations.
- 3] Connect the control wires between the "TXL" output on TORKEL and the "CONTROL IN" input on the TXL.
If two or more TXLs are to be used, provide a connection between the "CONTROL OUT" output on the first TXL and the "CONTROL IN" input on the second TXL, etc.
- 4] Connect the TXL to the mains voltage
- 5] Switch on the TXL.


Testing



WARNING!

See the chapter "Conducting a test" for safety precautions and how to prepare the test

- 1] Proceed in the same way as set forth in the chapter headed "Conducting a test" but before you start TORKEL you must set switch F1 to upper (ON) position on the TXL. (You must do this manually.)
- 2] Start TORKEL by pressing <ENTER>.

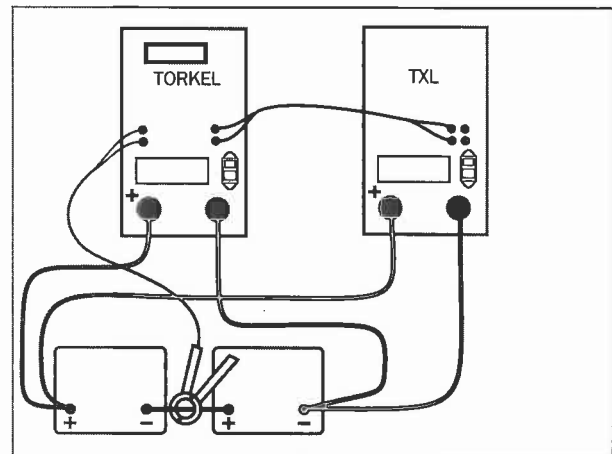

TORKEL with one TXL

15 Optional accessories

Cables

- Cable set, 2 x 3 m (10 ft), for connecting TORHEL to the battery:
70 mm² 270 A cable for TORHEL 820.
25 mm² 110 A cable for TORHEL 840 and TORHEL 860.
- Cables for controlling a TXL Extra Load from TORHEL.
- Sensing leads, 2 x 5 m (16 ft), used to measure voltage at the battery terminals.
- Extension cable, 2 x 3 m (10 ft), 25 mm², 110 A.

Clamp-on DC ammeter

- 200 A clamp-on DC ammeter
- 1000 A clamp-on DC ammeter

Software

- TORHEL Win software

Other

- Transport case
- TXL Extra Loads. The TXL830 is for up to 24 V batteries, the TXL850 for up to 48 V batteries and the TXL870 for up to 240 V batteries.
- TMC2001d Data Logger
- TMC4001 Multi-Channel Data Logger

16 Troubleshooting

Display on TOR KEL is dark.

- Check that the mains cable is properly plugged in.
- Check the mains voltage

Impossible to switch on the circuit breaker F1.

It is only possible to switch on F1 in the "Test battery" submenu. Furthermore, you must:

- 1] Connect the battery to TOR KEL
- 2] Set the current
- 3] Wait for message reading "Switch on F1".
- 4] Push the lever of F1 to the ON position a second time if it does not latch directly.

Voltage reading on the display is lower than the battery voltage.

You responded to the "Switch on F1" message by pressing <ENTER> without switching on F1.

You have accidentally switched off F1 manually.

TXL connected to TOR KEL

When a TXL and TOR KEL are connected via the signal cable connected to the "Control In" input, the following can happen:

Impossible to switch on the circuit breaker F1 on the TXL-unit.

You have not received the message "Switch on F1" on TOR KEL.

You have not connected the input CONTROL IN properly to TOR KEL.

The TXL have no mains power. If the fans are not running, check the mains connection and the mains switch.

Messages on display

"Connect battery" does not disappear.

- Check connection to the battery.
- Check the polarity of the connection to the battery.

- When you first connect a higher voltage to TOR KEL and then a lower voltage, you may have to wait for some time.

"Error: Connection"

TOR KEL has indicated that the battery voltage has disappeared.

- Check the connection to the battery.

"CHECK F1"

This message appears if the current is 0 A when current should be flowing.

- Check that circuit breaker F1 is switched on.

"CHECK F1 Input voltage "

- Check that circuit breaker F1 is switched on, that the battery is properly connected and that the battery voltage is not less than 10 V.

"Unable to regulate"

The message appears when TOR KEL can not regulate the current (or power or resistance) to the desired value.

The TOR KEL-unit can not regulate because it can not decrease its resistance further.

- You must decrease the current or connect more TOR KEL or TXL units.
- This is not a fault-situation if the actual TOR KEL is operating in a system of several TOR KEL units and another TOR KEL (TOR KEL nr 1) takes care of the total regulation.

"Error: External I"

The measured external current is less than the internal current

See also chapter headed "External Current Measurement".

- 1] Check the setting in sub menu "Basic setting", "I measurement".
- 2] Select "External" if you want to use the input External Current Measurement.
- 3] Select "Internal" if you do not want to use External Current Measurement
- 4] Check that the mV/A ratio complies with the clamp-on ammeter

TORKEL is set for "External Current Measurement" but the clamp-on ammeter:

- is not properly connected
- is not switched on
- is not correctly applied on the conductor.
- has bad batteries

"Overheated"

The internal thermal protection device has tripped.

- Check cooling and ambient temperature

A fan may be damaged (not rotating or slow).

- Call for service.

"Overcurrent"

The current through TORKEL is higher than allowed because of a fault in TORKEL's internal current limitation.

"Input voltage too high".

The battery voltage is higher than specified for your TORKEL.

"Input voltage > 27.6 V"

"Input voltage > 55.2 V"

"Input voltage > 144 V"

"Input voltage > 288 V"

"Input voltage > 480 V"

When you connect the battery, TORKEL will automatically select the voltage range and arrange the internal resistors for highest possible current.

If one of the messages above appears, TORKEL has stopped because the input voltage has increased and exceeded the range. You can continue the test but TORKEL will choose a higher voltage range and rearrange the internal resistors.

Note: The current rating for the new range is probably lower than the previous range (see chapter headed "Specifications").

"Input voltage too low"

The battery voltage is too low (less than 10 V, which is frequent on defective batteries) for safe operation with TORKEL.

"Calibrate!"

A calibration is recommended. TORKEL is now using calculated and standardised calibration values.

"Checksum error! Switch off"

Read error in TORKEL's control-memory.

- Switch off TORKEL and switch on again. If the message remains it might be necessary to perform the reset procedure in the chapter "Calibration".

"Power failure"

TORKEL has lost the mains power for a while when a test was in progress. TORKEL displays the values when the test was interrupted.

- You can choose to continue or end the test.

"8X0"

You need to restore Torkel, follow instructions below.

- 1] Connect Torkel to the PC and start Torkel. Press "ESC" to enter the main menu.
- 2] Run the file "restore.exe" and select the file xxxxxxxx.set (contact our Customer Service if you do not have the file).
- 3] Click the icon "TORKEL Restore" and select the "Com port".
- 4] When the message "Restoring complete" is shown, click "OK".
- 5] Calibrate Torkel.

17 Calibration

Calibration procedure

TORHEL has four circuits used for testing that require calibration:

- Internal current
- Internal voltage
- External voltage
- External current

The calibration procedure has four main steps:

- 1] Calibrating zero levels
- 2] Calibrating internal current (Int I)
- 3] Calibrating internal and external voltage (V)
- 4] Calibrating external current (Ext +I)

For main steps 2, 3 and 4 you can decide whether or not to perform them.

Note *Calibrate once a year to maintain proper accuracy.*

Stable voltage and current sources (which vary less than 1% per second) and accurate reference instruments must be used. The current source must be able to supply high current at a voltage between 10 and 30 V. One or two 12 V batteries can be used here.

How to calibrate



Warning

Do not connect or disconnect any of the cables unless the circuit breaker F1 is in the lower (OFF) position.

Do not touch conducting parts of the clamps on the current cables or the voltage sensing cables when they are connected to TORHEL.

- 1] Switch on TORHEL.
- 2] In the "MAIN MENU" select "BASIC SETTINGS".
- 3] Set "I MEASUREMENT" to "INTERNAL".
- 4] Switch off TORHEL.
- 5] Press the <Esc> and <Stop> keys simultaneously, while switching on TORHEL.

1. Calibrating zero levels

- 1] Message reading:
**Press ENTER
to calibrate**
- 2] Press <ENTER>.
 Message reading:
**Short-circuit
inputs**
- 3] Short-circuit the inputs.
 - a) "EXTERNAL CURRENT MEASUREMENT"
 - b) Positive (+) and negative (-) terminals for battery current.
 - c) "VOLTAGE SENSE"
- 4] Message reading:
**Switch on F1
Press ENTER**
- 5] Set switch F1 to its upper (ON) position.

- 6] Press <ENTER>.
Message reading:

**Calibrating
Zero levels**

F1 will trip.

- 7] Remove all short circuits (see step 3).

2. Calibrating internal current

- 1] Message reading:

**CALIBRATE Int.I ?
No**

- 2] Change to "Yes" using the vertical arrow keys (▼ or ▲).

- 3] Connect the current source (two car batteries in series for example) to the battery current terminals on TOR KEL.

Note: The current source must be able to supply a high stable current.

- 4] Connect an accurate current measurement reference instrument (for instance a current shunt with a voltmeter) in series with the batteries.

- 5] Press <ENTER>
Message reading:

**000 000 0
R:135 T:123 F1**

- 6] Change the displayed numbers to read as follows by using the vertical arrow keys (▼ or ▲).

**111 111 1
R:135 T:123 F1**

- 7] 17. Press <ENTER>
The fans will start.

- 8] Message reading:

**Calib internal I
Input: 085.00A**

- 9] Set switch <F1> to its upper (ON) position.

- 10] Change the current value on the display to the value read from the reference instrument.

- 11] Press <ENTER>.
F1 will trip.

Note If a message reading "Error: Unstable current" appears, press <ENTER> and try again. This can be caused by excessively high current from the batteries. Repeat the calibration at a lower current by changing the numbers in the message shown in step 6 to 111 010 1 or 111 100 1.

Note If a message reading "Error: >15%" appears, calibration has been rejected because it deviates too much from a calculated standardized value. Press <ESC> to repeat the calibration or to select "No" for this main step of the calibration. If you skipped one of the main steps in the calibration procedure (internal current for example) the calibration value for the skipped main step will be set to a calculated standardized value.

3. Calibrating internal and external voltage

- 1] Message reading:

**Calibrate V?
No**

- 2] Change to "Yes" using the vertical arrow keys (▼ or ▲).

The voltage measurement range must be calibrated at two points, hereinafter designated P1 and P2. Recommendation: Calibrate P1 at 12 V and P2 close to the top of the range or close to the highest voltage at which TOR KEL is to be used.

Ranges:

TOR KEL 820: 0-60 V
TOR KEL 840: 0-288 V
TOR KEL 860: 0-480 V

- 3] Connect a stable variable voltage source to the battery current terminals on TOR KEL.

- 4] Connect the same voltage source to the "VOLTAGE SENSE" input.

- 5] Connect an accurate reference instrument (voltmeter) across the voltage source.

- 6] Adjust the voltage source to the first point (P1) at which the voltage measurement is to be calibrated.

Recommended voltage: 12 V.

7) Press <ENTER>.

Message reading:

Please wait...
20sec

Switch on F1
Press ENTER

8) Set switch F1 to its upper (ON) position.

9) Press <ENTER>

Message reading:

P1
Input: 012.00V

10) Change the voltage shown on the display to the value read from the reference instrument (voltmeter).

11) Press <ENTER>.

Note: If a message reading "Error !!! Input too low" appears, check that the voltage source is connected properly to the "VOLTAGE SENSE" input and also the terminals used for the battery current.

Message reading:

P2: max. 480V
Input: 450.00V

12) Adjust the voltage source to the value to be used for point 2 (P2).

Note: The P2 value suggested by TORHEL is different for TORHEL 820, TORHEL 840 and TORHEL 860.

Change the voltage shown on the TORHEL display to the value read from the reference instrument (voltmeter).

13) Press <ENTER>.

Message reading:

Disconnect
Battery!

14) Disconnect TORHEL from the voltage source.
F1 will trip.

3) Press <ENTER>

Message reading:

P1: 10mV
Input: 010.00mV

4) Connect the voltage source to the EXTERNAL CURRENT MEASUREMENT input.

Adjust the voltage source to the value to be used for point 1 (P1).

Measure the voltage with a reference instrument. Change the voltage shown on the TORHEL display to the value read from the reference instrument (voltmeter).

5) Press <ENTER>.

Message reading:

P2: 900mV
Input: 900.00mV

6) Adjust the voltage source to the value to be used for point 2 (P2).

Change the voltage shown on the TORHEL display to the value read from the reference instrument (voltmeter).

7) Press <ENTER>.

Message reading:

PRESS ENTER TO
STORE CALIB DATA

8) Press <ENTER>

Message reading:

MAIN MENU
Test battery

Connect
Battery !

Calibration is now completed.

4. Calibrating of external current

1) Message reading:

CALIBRATE Ext.I ?
No

2) Change to "Yes" using the vertical arrow keys (▼ or ▲).

Calibration must be done at two points, called P1 and P2.

Resetting TOR KEL

General

This procedure has two purposes:

- To set the calibration values to calculated standardized values (useful if the calibration has become invalid or is lost).
- To restore the contents of the control memory after a message reading "**Checksum error**" has appeared.

Resetting TOR KEL can never be fully equivalent with regular calibration carried out using accurate and traceable reference instruments. However, it provides you with a quick and simple way to deal with a situation in which no calibration values at all are available. The result of the reset procedure is about 1 to 3% accurate except for the external current measurement where the accuracy will be poorer. Resetting must always be followed by calibration of the zero levels, which is a part of the regular calibration procedure. A complete calibration procedure should be conducted as soon as possible however.

It is possible to combine resetting and calibration. First perform a reset and then calibrate the measurement ranges for which required sources are available. Answer "No" for the ranges that cannot be calibrated. Standard calibration values will then be used for these ranges.

Note *When a reset is performed on TOR KEL the settings will be changed to the factory (default) settings.*

Performing a reset

- 1] Press the <ESC> key and the arrow up (▲) key simultaneously while switching on TOR KEL.
- 2] Press <ENTER> to confirm the reset as prompted on the display.

18 Specifications

Torkel 820

Specifications are valid at nominal input voltage and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

Environment

| | |
|--------------------------------|---|
| <i>Application field</i> | The instrument is intended for use in high-voltage substations and industrial environments. |
| <i>Temperature</i> | |
| <i>Operating</i> | 0°C to +40°C (32°F to +104°F) |
| <i>Storage & transport</i> | -40°C to +70°C (-40°F to +158°F) |
| <i>Humidity</i> | 5% – 95% RH, non-condensing |

CE-marking

| | |
|------------|---|
| <i>LVD</i> | Low Voltage Directive 73/23/EEC am. by 93/68/EEC |
| <i>EMC</i> | EMC Directive 89/336/EEC am. by 91/263/EEC, 92/31/EEC and 93/68/EEC |

Standards

| | |
|-------------------------|---|
| <i>Safety standards</i> | IEC 61010-1:2001 Incl. national dev. for US and CA EN 61010-1:2001 |
| <i>EMC standards</i> | EN 61326: 1997+A1:1998+A2:2001 |

General

| | |
|--------------------------------|--|
| <i>Mains voltage</i> | 100 – 240 V AC, 50/60 Hz |
| <i>Power consumption (max)</i> | 150 W |
| <i>Protection</i> | Thermal cut-outs, automatic overload protection |
| <i>Dimensions</i> | |
| <i>Instrument</i> | 210 x 353 x 700 mm (8.3" x 13.9" x 27.6") |
| <i>Transport case</i> | 265 x 460 x 750 mm (10.4" x 18.1" x 29.5") |
| <i>Weight</i> | 22.3 kg (49.2 lbs) 40.4 kg (89.1 lbs) with accessories and transport case |
| <i>Display</i> | LCD |
| <i>Available languages</i> | English, French, German, Spanish, Swedish |

Measurement section

Current measurement

| | |
|-------------------------|---------------------------|
| <i>Display range</i> | 0.0 – 2999 A |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +0.2 A) |
| <i>Resolution</i> | 0.1 A |

Internal current measurement

| | |
|--------------|-----------|
| <i>Range</i> | 0 – 300 A |
|--------------|-----------|

Input for clamp-on ammeter

| | |
|------------------------|-------------------------------------|
| <i>Range</i> | 0 – 1 V |
| <i>mV/A-ratio</i> | Software settable, 0.3 to 19.9 mV/A |
| <i>Input impedance</i> | >1 MΩ |

Voltage measurement

| | |
|---------------------------------|---------------------------|
| Display range 0.0 – 60 V | |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +0.1 V) |
| <i>Resolution</i> | 0.1 V |

| | |
|----------------------------------|-------------------------|
| Display range 0.0 – 500 V | |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +1 V) |
| <i>Resolution</i> | 0.1 V |

Time measurement

| | |
|-------------------------|---------------------------|
| <i>Basic inaccuracy</i> | ±0.1% of reading ±1 digit |
|-------------------------|---------------------------|

Storage of measured values

| | |
|---------------------------|----------|
| <i>Torkel stand alone</i> | |
| <i>Time (max)</i> | 10 h |
| <i>Time interval</i> | 6 s |
| <i>Torkel Win</i> | |
| <i>Time (max)</i> | 24 h |
| <i>Time interval</i> | 1 – 24 s |

Load section

| | |
|---|---|
| <i>Battery voltage</i> | 10 – 60 V DC |
| <i>Max. current</i> | 270 A |
| <i>Max. power</i> | 15 kW |
| <i>Load patterns</i> | Constant current, constant power, constant resistance, current or power profile |
| <i>Current setting</i> | 0–270.0 A (2999.9 A) ¹⁾ |
| <i>Power setting</i> | 0–15.00 kW (299.99 kW) ¹⁾ |
| <i>Resistance setting</i> | 0.1–2999.8 Ω |
| <i>Battery voltage range</i> | 2 ranges, selected automatically at start of test |
| <i>Stabilization (For internal current measurement)</i> | ±(0.5% of reading + 0.5 A) |

| | Battery voltage | Highest permissible current | Resistor element (Nominal values) |
|----------------|------------------------|------------------------------------|--|
| Range 1 | 10 – 27.6 V | 270 A | 0.069 Ω |
| Range 2 | 10 – 55.2 V | 270 A | 0.138 Ω |

1) Maximum value for a system with more than one load unit

Inputs, maximal values

| | |
|------------------------------|--|
| EXTERNAL CURRENT MEASUREMENT | 1 V DC, 300 V DC to ground. Current shunt should be connected to the negative side of the battery |
| START/STOP | Closing/opening contact Closing and then opening the contact will start/stop Torkel. It is not possible to keep the contacts in closed position. (Min. time open is 25 ms). |
| <i>Delay until start</i> | 200 – 300 ms |
| <i>Stop delay</i> | 100 – 200 ms |
| <i>Battery</i> | 60 V DC, 500 V DC to ground |
| VOLTAGE SENSE | 60 V DC, 500 V DC to ground |
| SERIAL | < 15 V |
| ALARM | 250 V DC 0.28 A 28 V DC 8 A 250 V AC 8 A |

Outputs, maximal values

| | |
|------------|---------------|
| START/STOP | 5 V, 6 mA |
| TXL | Relay contact |
| SERIAL | < 15 V |
| ALARM | Relay contact |

Discharging capacity, examples

12 V battery (6 cells) ²⁾

| Final voltage | Constant current | Constant power |
|----------------------|------------------|----------------|
| 1.80 V/cell (10.8 V) | 0 – 121 A | 0 – 1.31 kW |
| 1.75 V/cell (10.5 V) | 0 – 117 A | 0 – 1.23 kW |
| 1.67 V/cell (10.0 V) | 0 – 110 A | 0 – 1.10 kW |

24 V battery (12 cells) ²⁾

| | | |
|----------------------|-----------|-------------|
| 1.80 V/cell (21.6 V) | 0 – 270 A | 0 – 5.8 kW |
| 1.75 V/cell (21.0 V) | 0 – 266 A | 0 – 5.59 kW |
| 1.60 V/cell (19.2 V) | 0 – 241 A | 0 – 4.63 kW |

48 V battery (24 cells) ²⁾

| | | |
|----------------------|-----------|-------------|
| 1.80 V/cell (43.2 V) | 0 – 270 A | 0 – 11.6 kW |
| 1.75 V/cell (42.0 V) | 0 – 270 A | 0 – 11.3 kW |
| 1.60 V/cell (38.4 V) | 0 – 259 A | 0 – 9.9 kW |

²⁾ 2.15 V per cell when test starts

Torkel 840/860

Specifications are valid at nominal input voltage and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

Environment

| | |
|--------------------------------|---|
| <i>Application field</i> | The instrument is intended for use in high-voltage substations and industrial environments. |
| <i>Temperature</i> | |
| <i>Operating</i> | 0°C to +40°C (32°F to +104°F) |
| <i>Storage & transport</i> | -40°C to +70°C (-40°F to +158°F) |
| <i>Humidity</i> | 5% – 95% RH, non-condensing |

CE-marking

| | |
|------------|---|
| <i>LVD</i> | Low Voltage Directive 73/23/ EEC am. by 93/68/EEC |
| <i>EMC</i> | EMC Directive 89/336/EEC am. by 91/263/EEC, 92/31/EEC and 93/68/EEC |

General

| | |
|--------------------------------|---|
| <i>Mains voltage</i> | 100 – 240 V AC, 50/60 Hz |
| <i>Power consumption (max)</i> | 150 W |
| <i>Protection</i> | Thermal cut-outs, automatic overload protection |
| <i>Dimensions</i> | |
| <i>Instrument</i> | 210 x 353 x 700 mm (8.3" x 13.9" x 27.6") |
| <i>Transport case</i> | 265 x 460 x 750 mm (10.4" x 18.1" x 29.5") |
| <i>Weight</i> | 21.5 kg (47.4 lbs) 38 kg (83.8 lbs) with accessories and transport case. |
| <i>Display</i> | LCD |
| <i>Available languages</i> | English, French, German, Spanish, Swedish |

Measurement section

Current measurement

| | |
|-------------------------|---------------------------|
| <i>Display range</i> | 0.0 – 2999 A |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +0.2 A) |
| <i>Resolution</i> | 0.1 A |

Internal current measurement

| | |
|--------------|-----------|
| <i>Range</i> | 0 – 300 A |
|--------------|-----------|

Input for clamp-on ammeter

| | |
|------------------------|-------------------------------------|
| <i>Range</i> | 0 – 1 V |
| <i>mV/A-ratio</i> | Software settable, 0.3 to 19.9 mV/A |
| <i>Input impedance</i> | >1 MΩ |

Voltage measurement

| | |
|---------------------------------|---------------------------|
| <i>Display range 0.0 – 60 V</i> | |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +0.1 V) |
| <i>Resolution</i> | 0.1 V |

| | |
|----------------------------------|-------------------------|
| <i>Display range 0.0 – 500 V</i> | |
| <i>Basic inaccuracy</i> | ±(0.5% of reading +1 V) |
| <i>Resolution</i> | 0.1 V |

Time measurement

| | |
|-------------------------|---------------------------|
| <i>Basic inaccuracy</i> | ±0.1% of reading ±1 digit |
|-------------------------|---------------------------|

Storage of measured values

| | |
|---------------------------|------|
| <i>Torkel stand alone</i> | |
| <i>Time (max)</i> | 10 h |
| <i>Time interval</i> | 6 s |
| <i>Torkel Win</i> | |

| | | |
|--|---|--|
| Time (max) | 24 h | |
| Time interval | 1 – 24 s | |
| Load section | | |
| Max. battery voltage | 288 V DC (TORCEL 840) 480 V DC (TORCEL 860) | |
| Max. current | 110 A | |
| Max. power | 15 kW | |
| Load patterns | Constant current, constant power, constant resistance, current or power profile | |
| Current setting | 0-110.0 A (2999.9 A) ¹⁾ | |
| Power setting | 0-15.00 kW (299.99 kW) ¹⁾ | |
| Resistance setting | 0.1-2999.8 Ω | |
| Battery voltage range, TORCEL 840 | 4 ranges, selected automatically at start of test | |
| Battery voltage range, TORCEL 860 | 5 ranges, selected automatically at start of test | |
| Stabilization (For internal current measurement) | $\pm(0.5\%$ of reading +0.5 A) | |
| | Battery voltage | Highest permissible current |
| | | Resistor element (Nominal values) |
| Range 1 | 10 – 27.6 V | 110 A |
| Range 2 | 10 – 55.2 V | 110 A |
| Range 3 | 10 – 144 V | 110 A |
| Range 4 | 10 – 288 V | 55 A |
| Range 5 ²⁾ | 10 – 480 V | 55 A (max power 15 kW) |

1) Maximum value for a system with more than one load unit

2) TORCEL 860

Inputs, maximal values

| | |
|------------------------------|--|
| EXTERNAL CURRENT MEASUREMENT | 1 V DC, 300 V DC to ground. Current shunt should be connected to the negative side of the battery |
| START/STOP | Closing/opening contact Closing and then opening the contact will start/stop Torkel. It is not possible to keep the contacts in closed position. (Min. time open is 25 ms). |
| Delay until start | 200 – 300 ms |
| Stop delay | 100 – 200 ms |
| Battery | 480 V DC, 500 V DC to ground |
| VOLTAGE SENSE | 480 V DC, 500 V DC to ground |
| SERIAL | < 15 V |
| ALARM | 250 V DC 0.28 A 28 V DC 8 A 250 V AC 8 A |

Outputs, maximal values

| | |
|------------|---------------|
| START/STOP | 5 V, 6 mA |
| TXL | Relay contact |
| SERIAL | < 15 V |
| ALARM | Relay contact |

Discharging capacity, examples

| | | |
|--|-------------------------|-----------------------|
| 12 V battery (6 cells) ³⁾ | | |
| Final voltage | Constant current | Constant power |
| 1.80 V/cell (10.8 V) | 0 – 50.0 A | 0 – 0.54 kW |
| 1.75 V/cell (10.5 V) | 0 – 49.0 A | 0 – 0.51 kW |
| 1.67 V/cell (10.0 V) | 0 – 46.0 A | 0 – 0.46 kW |
| 24 V battery (12 cells) ³⁾ | | |
| 1.80 V/cell (21.6 V) | 0 – 110 A | 0 – 2.37 kW |
| 1.75 V/cell (21.0 V) | 0 – 110 A | 0 – 2.31 kW |
| 1.60 V/cell (19.2 V) | 0 – 100 A | 0 – 1.92 kW |

| | | |
|---|------------|-------------|
| 48 V battery (24 cells) ³⁾ | | |
| 1.80 V/cell (43.2 V) | 0 – 110 A | 0 – 4.75 kW |
| 1.75 V/cell (42.0 V) | 0 – 110 A | 0 – 4.62 kW |
| 1.60 V/cell (38.4 V) | 0 – 110 A | 0 – 4.22 kW |
| 110 V battery (54 cells) ³⁾ | | |
| 1.80 V/cell (97.2 V) | 0 – 110 A | 0 – 10.7 kW |
| 1.75 V/cell (94.5 V) | 0 – 110 A | 0 – 10.4 kW |
| 1.60 V/cell (86.4 V) | 0 – 110 A | 0 – 9.5 kW |
| 120 V battery (60 cells) ³⁾ | | |
| 1.80 V/cell (108 V) | 0 – 110 A | 0 – 11.9 kW |
| 1.75 V/cell (105 V) | 0 – 110 A | 0 – 11.5 kW |
| 1.60 V/cell (96 V) | 0 – 110 A | 0 – 10.5 kW |
| 220 V battery (108 cells) ³⁾ | | |
| 1.80 V/cell (194 V) | 0 – 55 A | 0 – 10.7 kW |
| 1.75 V/cell (189 V) | 0 – 55 A | 0 – 10.4 kW |
| 1.60 V/cell (173 V) | 0 – 51.0 A | 0 – 8.82 kW |
| 240 V battery (120 cells) ³⁾ | | |
| 1.80 V/cell (216 V) | 0 – 55 A | 0 – 11.9 kW |
| 1.75 V/cell (210 V) | 0 – 55 A | 0 – 11.5 kW |
| 1.60 V/cell (192 V) | 0 – 55 A | 0 – 10.5 kW |
| UPS battery (180 cells) ³⁾ (TORCEL 860) | | |
| 1.70 V/cell (306 V) | 0 – 38 A | 0 – 15 kW |
| 1.60 V/cell (288 V) | 0 – 38 A | 0 – 15 kW |
| UPS battery (204 cells) ³⁾ (TORCEL 860) | | |
| 1.80 V/cell (367 V) | 0 – 34 A | 0 – 15 kW |
| 1.60 V/cell (326 V) | 0 – 34 A | 0 – 15 kW |

3) 2.15 V per cell when test starts

TXL 830 /850 /870

Specifications are valid at nominal input voltage and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

Environment

Application field The instrument is intended for use in high-voltage substations and industrial environments.

Temperature

Operating 0°C to +40°C (32°F to +104°F)

Storage & transport -40°C to +70°C (-40°F to +158°F)

Humidity 5% – 95% RH, non-condensing

CE-marking

LVD Low Voltage Directive 73/23/ EEC am. by 93/68/EEC

EMC EMC Directive 89/336/EEC am. by 91/263/EEC, 92/31/EEC and 93/68/EEC

General

Mains voltage 100 – 240 V AC, 50/60 Hz

Power consumption (max) 75 W

Protection Thermal cut-outs, automatic over-load protection

Dimensions

Instrument 210 x 353 x 600 mm
(8.3" x 13.9" x 23.6")

Transport case 265 x 460 x 750 mm
(10.4" x 18.1" x 29.5")

Weight 13 kg (28.7 lbs)
21.4 kg (47.2 lbs) with transport case

Cable sets

for TXL830/850 2 x 3 m (9.8 ft), 70 mm², 270 A, with cable lug. Max. 100 V. 5 kg (11 lbs)

for TXL870 2 x 3 m (9.8 ft), 25 mm², 110 A, with cable clamp/lug. Max. 480 V. 3 kg (6.6 lbs)

Load section

| | TXL830 | TXL850 | TXL870 |
|--------------------------|---------------|---------------|---------------------------------|
| Max. voltage (DC) | 28 V | 56 V | 140 V/ 280 V |
| Max. current | 300 A | 300 A | 112 A at 140 V 56 A at 280 V |
| Max. power | 8.3 kW | 16.4 kW | 15.8 kW |

Internal resistance, 3-position selector

| Position 1 | TXL830 | TXL850 | TXL870 |
|----------------|---------------------------|---------------------------|-----------------------------|
| Current | 0.275 Ω | 0.55 Ω | 4.95 Ω |
| 100 A | at 27.6 V (12 x 2.3 V) | at 55.2 V (24 x 2.3 V) | – |
| 78.5 A | at 21.6 V (12 x 1.8 V) | at 43.2 V (24 x 1.8 V) | – |
| 50.1 A | – | – | at 248.4 V (108 x 2.3 V) |
| 39.2 A | – | – | at 194.4 V (108 x 1.8 V) |
| Position 2 | TXL830 | TXL850 | TXL870 |
| Current | 0.138 Ω | 0.275 Ω | 2.48 Ω |
| 200 A | at 27.6 V | at 55.2 V (24 x 2.3 V) | – |
| 156 A | at 21.6 V | 43.2 V (24 x 1.8 V)– | – |
| Position 3 | TXL830 | TXL850 | TXL870 |
| Current | 0.092 Ω | 0.184 Ω | 1.24 Ω |

| | | | |
|--------|-----------|---------------------------|----------------------------|
| 300 A | at 27.6 V | at 55.2 V (24 x 2.3 V) | – |
| 235 A | at 21.6 V | 43.2 A (24 x 1.8 V) | – |
| 100 A | – | – | at 124.2 V (54 x 2.3 V) |
| 78.4 A | – | – | at 97.2 V (54 x 1.8 V) |

19 Index

| | | |
|--|--------|--|
| A | | |
| Alarm | 13 | |
| Ammeter | 23 | |
| Auto-limits..... | 10 | |
| B | | |
| Basic settings | 10 | |
| C | | |
| Cables | 44 | |
| Calculating current | 36 | |
| Calibrating internal and external voltage..... | 49 | |
| Calibrating internal current | 49 | |
| Calibrating of external current | 50 | |
| Calibrating zero levels | 48 | |
| Changing language in TORHEL..... | 32 | |
| Changing the language used in TORHEL | 32 | |
| Checksum error | 51 | |
| Checksum error! | 47 | |
| Circuit breaker | 13 | |
| Clamp-on Ammeter | 23 | |
| Connection to a PC..... | 30 | |
| Constant current..... | 14 | |
| Constant power..... | 16 | |
| Constant resistance..... | 16 | |
| Current, regulate | 36 | |
| Current cables | 14 | |
| Current limitation | 36 | |
| Current shunt | 22 | |
| D | | |
| DC Clamp-on Ammeter | 23 | |
| Desired current | 36 | |
| Display..... | 12 | |
| E | | |
| Ending the test | 15 | |
| Error: External I | 47 | |
| External control..... | 13 | |
| External current measurement | 12 | |
| Extra Loads | 42 | |
| F | | |
| F1 | 13 | |
| I | | |
| Installing TORHEL Win..... | 31 | |
| K | | |
| Keys..... | 12 | |
| L | | |
| Lamps..... | 12 | |
| Language..... | 32 | |
| Load-providing capability | 38 | |
| Load capacities | 37 | |
| Load profile | 18 | |
| M | | |
| Main menu | 10 | |
| Memory..... | 10 | |
| N | | |
| New language into TORHEL | 31 | |
| O | | |
| Operator control | 12 | |
| Overcurrent | 47 | |
| Overheated..... | 47 | |
| P | | |
| Pausing the test | 15 | |
| PC | 30 | |
| Power failure | 47 | |
| R | | |
| Regulate current | 36 | |
| Regulation time | 22, 38 | |
| Resetting the alarm..... | 26 | |
| Resetting TORHEL | 51 | |
| Results | 10 | |
| S | | |
| Select language | 10 | |

| | |
|-------------------------------------|--------|
| SERIAL | 13 |
| Serial | 13 |
| Setting the current..... | 15 |
| Setting up communication | 31 |
| Setting up the extra load..... | 43 |
| Software key..... | 31, 51 |
| START/STOP | 13 |
| Start/stop connector | 34 |
| Starting the test..... | 15 |
| Stop limit parameters..... | 15 |
| Store voltage curve | 30 |
| Systems | 39 |
| System of TORCEL and TXL units..... | 41 |
| System TORCEL and TXL units..... | 41 |

T

| | |
|-------------------------------|----|
| Testing with TORCEL Win..... | 32 |
| Test at constant current..... | 14 |
| Test method..... | 10 |
| TORCEL load capacity..... | 36 |
| Torkel systems..... | 39 |
| TORCEL Win | 30 |
| TORCEL Win software..... | 6 |
| TXL..... | 13 |

U

| | |
|--------------------------|----|
| Unable to regulate | 46 |
|--------------------------|----|

V

| | |
|----------------------------|--------|
| Voltage curve, store | 6, 30 |
| Voltage range | 15, 47 |

W

| | |
|-------------------------------|----|
| Warning limit parameters..... | 15 |
|-------------------------------|----|

